



OPERATOR'S AND MAINTENANCE MANUAL

**Commercial Mower
Model: CM2160**

FOR SERIAL #S STARTING
WITH 011827
RELEASED 07/08/15



⚠ DANGER
*Read this manual and the manual for
your tractor carefully to acquaint yourself
with both machines before operating!*

MODEL NUMBER _____
SERIAL NUMBER _____
DATE OF PURCHASE _____

Customer Pre-Operation Check List	Reference
<input type="checkbox"/> Read, understand and follow the general safety rules listed in this manual.	Page 2
<input type="checkbox"/> Check all shields and guards.	Page 2
<input type="checkbox"/> Cut driveshaft to the proper length for your tractor.	Page 8
<input type="checkbox"/> Add ballast to the rear tractor tires and space them at their widest setting.	Page 8
<input type="checkbox"/> Add ballast and front weights to your tractor, if needed.	Page 8
<input type="checkbox"/> Check all fluid levels in the mower.	Page 10
<input type="checkbox"/> Turn gate valve under the oil tank “on”.	Page 11
<input type="checkbox"/> Check all grease fittings.	Page 14

Service Notice

Please take extra care while servicing the hydraulic system by keeping all openings properly covered, thus preventing contamination of the hydraulic components. Contaminates in the oil WILL cause faulty operation or premature failure of components in the hydraulic control valve, pump, and motor.

Disclaimer

The mower is designed to trim branches with the mower deck in the VERTICAL position while moving the tractor forwards or backwards, repositioning the mower deck after each path (See Fig. 1).

The mower is also designed to cut tree trunks and branches up to 6” in diameter with the “Hinged Gate” in the unlocked, secured raised position and the mower deck in the HORIZONTAL position, perpendicular to the trunk and/or branch of the tree (See Fig. 2).

Any modes of operation other than the ones described above and shown below, while cutting trees and/or branches are not permitted and shall void the warranty. Moreover, HARDEE by EVH Manufacturing Company, LLC does not accept any liability to any person and/or material when the mower is operated in violation of the above information.

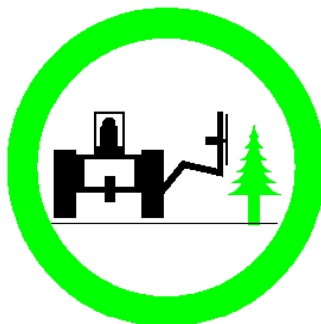


Fig. 1

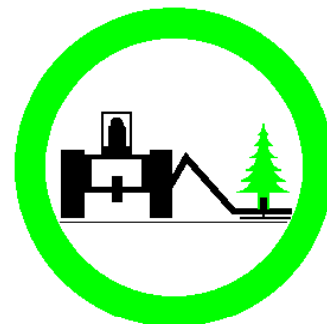


Fig. 2

Table of Contents

Section 1 Introduction	1	Routine Maintenance Checklist	17
To Our Customers	1	Section 6 Troubleshooting	18-19
Owner's Responsibility	1	Troubleshooting Guide	18-19
Purpose Of This Manual	1	Section 7 Specifications	20
Safety-Alert Symbol	1	Summary Of Specifications	20
Signal Words	1	Section 8 Replacement Parts	21
Customer Assistance	1	Parts Listing For Commercial Mower CM2160	21-28
Section 2 Safety Information	2	Hydraulic Schematic For CM2160	29-30
General Safety Rules	2	Blade Holder with Blades	31
Safety Decals	3-6	Hydraulic Motor Housing Assembly	32
Section 3 Assembly And Installation	7	25792 Driveshaft Breakdown	33
Component Identification And Terminology	7	25793 Driveshaft Breakdown	34
Tractor Requirements	8	Belting Breakdown	35-36
Driveshaft Installation	8	Front Chain Guard Breakdown	37
Driveshaft Installation On Pump Shaft	8	Rear Chain Guard Breakdown	38
Tractor Hook-Up Procedures	8	Section 9 Reference	39
Driveshaft Installation On PTO	9	Bolt Torque	39
Hydraulic System Setup	9	Checking Bolt Torque	39
Working Safely With Hydraulic Lines	9	Torque Specifications	39
Description of Operation	9	Section 10 Warranty	40
Section 4 Operation Instruction	10		
Operation Instructions	10		
During Operation	10		
Daily Start-Up Checklist	10		
Operating Environment	10		
Application Do's And Don'ts	10		
Using Your Mower	11		
Getting Started	11		
Boom Breakaway	12		
Mowing In Reverse	12		
Side Dressing Trees	12		
Cutting Larger Brush and Trees	12		
Hydraulic Oil Cooler	13		
Unhook And Post Use Care	13		
Unhooking The CM2160	13		
Post Use Care	13		
Section 5 Maintenance	14		
Maintenance And Service Schedule	14		
First Stage Boom	14		
First Stage Boom To Second Stage Boom	14		
Deck And Second Stage Boom	14		
Hydraulic Motor Housing Assembly	14		
Greasing PTO Driveshaft To Pump	14		
Inspection And Replacement Of Blades	15		
Inspection And Replacement Of Blade Holder	15		
Inspection	15		
Replacement	15		
Checking The Mower Head Relief Valve	15		
Checking The Tractor's Cylinder Control Valve	16		
Hydraulic Oil Cooler (AIR COOLED)	16		

© Copyright 2011 All Rights Reserved

Hardee by EVH provides this publication "as is" without warranty of any kind, either expressed or implied. Every precaution has been taken in the design of this manual, however EVH assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein. EVH reserves the right to revise and improve this product at any time. The illustrations in this manual are not intended for the safe and proper assembly or disassembly of this product, but for parts ordering reference only.

To Our Customers

We at Hardee by EVH Manufacturing Company thank you for buying your new Commercial Mower.

We have tried hard to build a mower to do the work you have in mind. Many hours of engineering, field-testing and improvement have gone into the design and fabrication of your mower. We will strive to continue this quality of manufacturing in the future, always keeping the customer's needs clearly in mind.

The best performance of your mower will depend on you. Proper lubrication, maintenance, hookup, adjustments and operation are essential for it to give you long and dependable service. However, as with any type of equipment, your mower is designed to perform specific functions.

In this manual, you will find instructions on mower features, maintenance and operation. If customer service or repair parts are required, contact your local Hardee dealer. Please specify model and serial number when ordering parts.

Owner's Responsibility

The manufacturer has no control over the ultimate use of the mower and therefore assumes no responsibility or liability for damage or injury resulting from the use of this machine.

The upkeep of the hydraulic mower is the responsibility of the user. This upkeep includes all shielding, guards, and safety decals (OSHA Regulation 1928.57). You can obtain replacement parts from any authorized Hardee dealer.

Read this Operator's Manual before operating the mower. Failure to do so could result in injury to the operator or to others. Remember that most accidents occur due to neglect or carelessness. The operator is responsible for inspecting and making repairs as may be necessary. Cleaning after each use and storage under a shelter will extend the life of the mower.

Purpose of This Manual

This manual provides information on safety, operation, adjustments, troubleshooting and maintenance of your new mower. Please read and follow all the recommendations to help ensure that you get many years of service from your new Hardee mower.

If you need additional copies of this manual, please contact your local Hardee dealer or download a copy from our website at www.evhmfg.com.

Safety-Alert Symbol



This symbol is the safety alert symbol. It appears throughout this manual to call your attention to instructions involving your personal safety and the safety of others. Failure to follow these instructions can result in injury or death.

Signal Words

Safety signal words are words that call attention to the safety sign and designate a degree or level of hazard seriousness. The signal words used throughout this manual are DANGER, WARNING and CAUTION. Please read and follow all safety messages that have these signal words shown for your protection.



DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

Customer Assistance

The Hardee sales team would like you to be satisfied with your new Commercial Mower. If for some reason you have any questions about the information in this manual or have a problem with your mower, please discuss the problem or question with the management of your local dealership. If further assistance is required, please contact:

Hardee By EVH Manufacturing Company, LLC
Sales Department
4895 Red Bluff Road
Loris, SC 29569
843-756-2555

Safety Information

General Safety Rules

This section of your manual will address the safe operation of your new mower. We at Hardee strive to produce a machine that is both a quality product and safe to operate. Please take the time to read, understand and follow the safety rules listed below and throughout this manual.

Your safety also depends on you becoming familiar with the basic operation of your new mower. You can find complete instructions for this mower in the Operation Instruction section of this manual. We believe that using your mower safely, in a safe environment will give you great results!

DANGER

This machine is designed for use on a closed cab tractor only! If your tractor has an open cab, then it MUST be equipped with operator protective equipment in the form of shielding from thrown objects and Roll Over Protective Structure (ROPS) to operate this equipment safely.

DANGER

Rotary mowers have the inherent ability to throw debris considerable distances when the blades are allowed to strike foreign objects. The operator must use caution or serious injury may result. Be sure bystanders are at a safe distance at all times when the mower is in use.

WARNING

Always keep your tractor level as you reach over ditches, etc. Be careful to keep ample distance between the rear tire and the top of the ditch bank to avoid a cave-in of the bank.

WARNING

Failure to keep the tractor level may result in loss of traction, tipping, rollover, property damage, personal injury or death.

WARNING

Never stand, or allow others to stand, under the boom or mowerhead at any time. Never park the unit without placing the mowerhead squarely and firmly on the

ground. Serious injury or death by crushing may occur in case of hydraulic failure.

DANGER

Do not look under the mowerhead or attempt to remove objects or branches from under the mowerhead while the tractor is running. Serious injury, loss of limb or death may result.

DANGER

Do not reach under the mowerhead at any time. Mower blades may cause serious injury, loss of limb or disfigurement.

WARNING

Never use the mower for a crane or lifting device of any kind. It is not designed for this purpose. Serious damage to unit may occur. Serious bodily injury may be incurred from this misuse.

WARNING

Never use the mower for a man-lift or personnel lift. It is not designed for this purpose. Serious damage to unit may occur. Serious bodily injury may be incurred from this misuse.

DANGER

Never operate the mower within 10 feet of overhead power lines or utility lines. Do not trim trees with power lines running through them. Serious injury or death by electrocution may occur.

WARNING

Never allow the mower to impact rock piles, piles of gravel, steel guardrails or concrete abutments. Contact with these objects could cause blade failure. Serious machine damage, property damage or bodily injury may occur. Check the area for these items before mowing.

DANGER

Never attempt to use the mower to remove brush or trees larger than 6 inches in diameter. Failure to use caution when cutting trees, may lead to the tree falling on the cutter deck and tipping the tractor over.

Safety Decals

Your Hardee mower ships with all safety decals in place. They are located in areas on the mower that are potentially hazardous. Please locate, read and follow the information you find on these decals.

By law, you must replace any safety decals that are damaged or missing. You can order replacement decals from any local Hardee dealer. Just ask for part number 15845.

To apply the replacement decals:

- Clean the surface to place the new decal.
- Peel the decal away from the paper backing.
- Press firmly onto the clean surface.
- Squeeze out any air pockets using a straight edge.



Danger – Thrown Object
 (P/N – 15845-16)



Danger – Rotating Driveline
 (P/N – 15845-15)



Operating Safety and General
 Instruction
 (P/N – 15845-9)



Warning – Thrown Object
 (P/N – 11005)



WEIGHT BOX

Safety Decals, continued



Deck



Warning – Rotating Components
(P/N – 15845-10)



Hitch Frame



Danger – Crushing Hazard
(P/N – 15845-2)




Hitch Frame



Warning – High Pressure Fluid Hazard
(P/N – 15845-11)



Hitch Frame

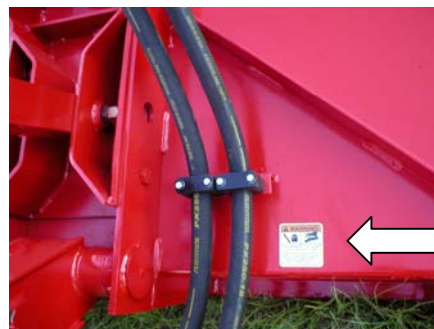

Deck

Safety Decals, continued



Deck Linkage (BOTH SIDES)




1st Stage Boom



1st Stage Boom



Warning – Pinch Point
(P/N – 15845-3)

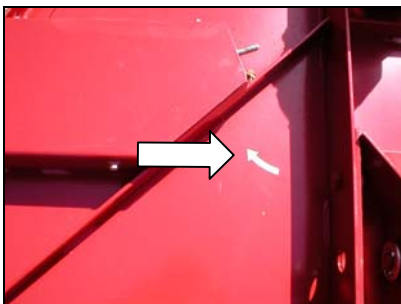


Deck



Blade Rotation
(P/N – 15845-4)



Hitch Frame

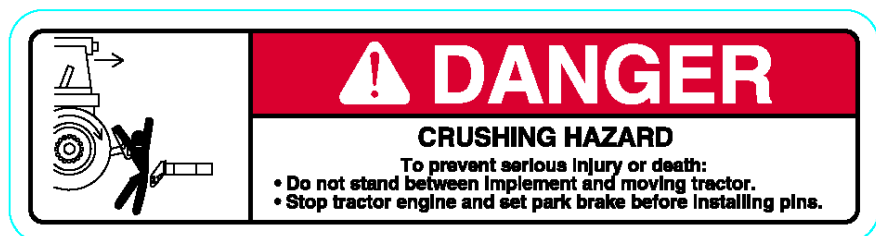

Danger – Crushing Hazard
(P/N – 15845-8)

Safety Decals, continued



Deck



Danger – Keep Clear
 (P/N – 15845-1)



Hitch Frame



Danger – Electrocutation, Falling and Crushing Hazard
 (P/N – 15845-12) (P/N – 15845-13) (P/N – 15845-14)



Deck



Danger – Exposed Blades
 (P/N – 15338)



Deck – Front/Rear




Weight Box – Front/Rear

15852 – Red Reflector, Rear
 (Not Shown)

15853 – Yellow Reflector, Front

Component Identification and Terminology

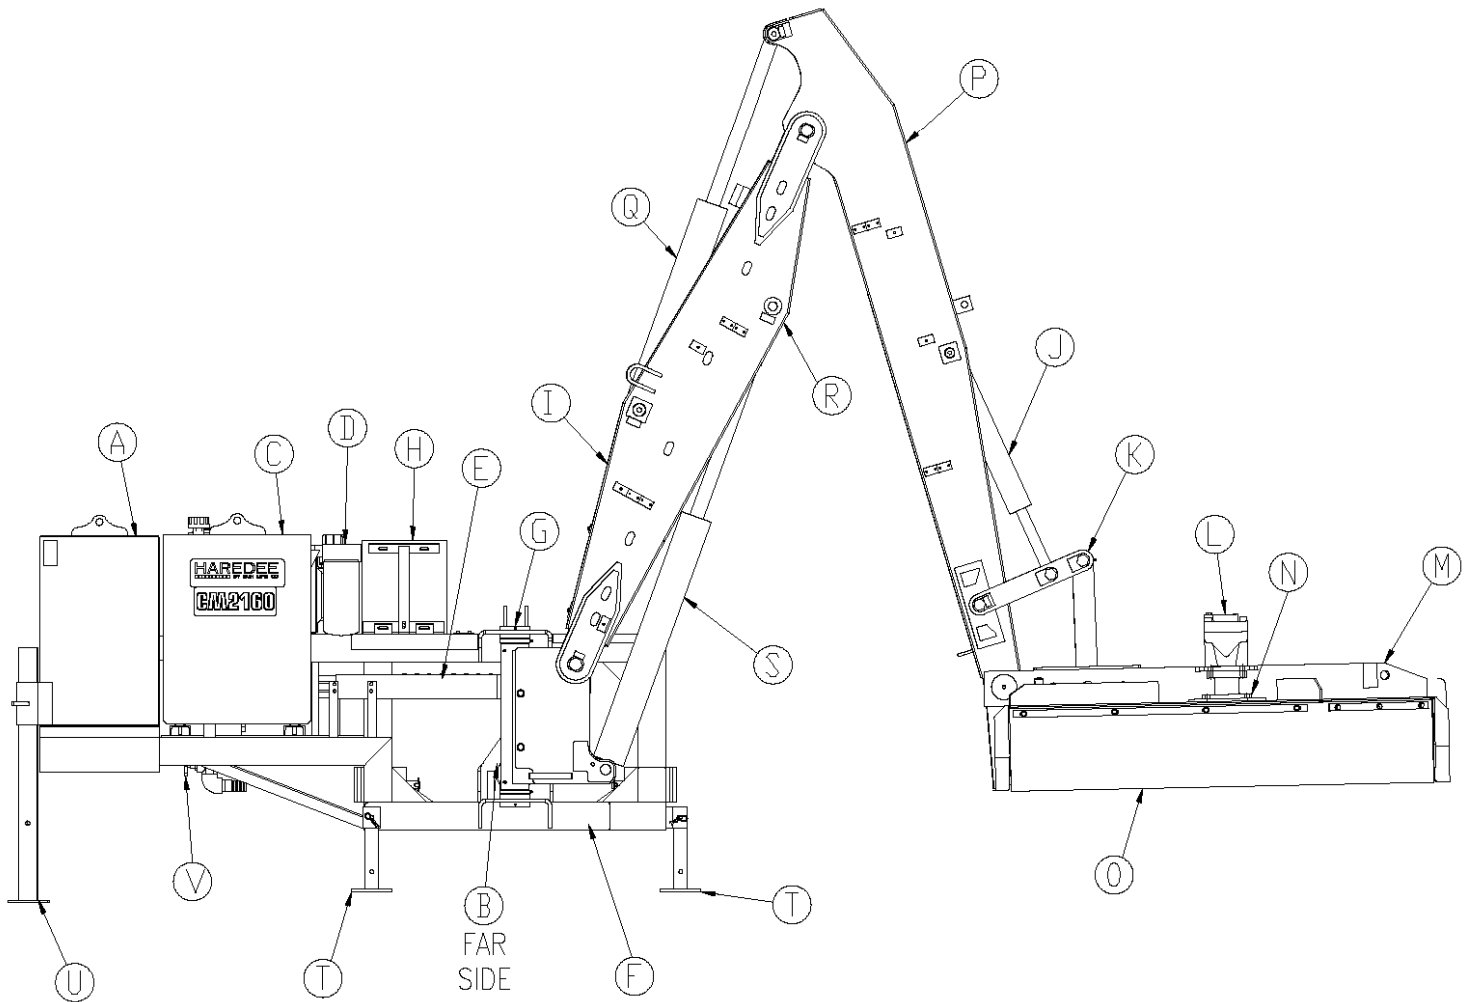

- | | | | |
|---|-----------------------------------|---|------------------------------------|
| A | Weight Box | L | Hydraulic Motor |
| B | Hydraulic Pump | M | Deck |
| C | Oil Tank | N | Motor Drive Housing |
| D | Return Filter | O | Rubber Shielding |
| E | Swing Cylinder | P | 2 nd Stage (Reach) Boom |
| F | Hitch Frame | Q | 2 nd Stage Cylinder |
| G | Swing Post | R | Lift Breakaway |
| H | Oil Cooler | S | 1 st Stage Cylinder |
| I | 1 st Stage (Lift) Boom | T | Short Stand (2) |
| J | Deck Cylinder | U | Long Stand (2) |
| K | Deck Linkage | V | Gate Valve |

Assembly and Installation

Tractor Requirements

The Commercial Mower you have purchased is designed for tractors with 150 horsepower and above and weighing 15,500 lbs. plus, equipped with a 1000 RPM rear power take-off (PTO).

Your tractor must also be equipped with a standard hitch. A category 3 quick hitch can also be used with this mower.



To insure stability of your tractor, the rear tires should be spaced at their widest setting. You should also add ballast to maintain proper steering control and balance. In addition, unless your tractor is 4-wheel drive, you may also need to add front weights. Please refer to the operator's manual for your tractor to determine the correct setup.



Figure 1



DANGER

This machine is designed for use on a closed cab tractor only! If your tractor has an open cab, then it MUST be equipped with operator protective equipment in the form of shielding from thrown objects and Roll Over Protective Structure (ROPS) to operate this equipment safely.

Driveshaft Installation

The make of your tractor will determine the length of driveshaft you require to connect from the end of the pump shaft to the PTO connection of your tractor. This step may require cutting the standard driveshaft included with the Hardee mower. We recommend contacting your local Hardee dealer for assistance.

Driveshaft Installation on Pump Shaft

Refer to Figure 1 for reference

- ✓ Verify that driveshaft is the proper length.
- ✓ Grease both pump shaft and driveshaft.
- ✓ Attach equipment end of driveshaft to pump.
Tractor end has a figure of a tractor stamped onto the guard.
- ✓ Rotate driveshaft to line up holes for securing with the bolt and nut provided.
- ✓ Fix shaft guard to the mower using anti-rotation chain.

Tractor Hook-Up Procedures

- ✓ Hook Tractor 3-point hitch to mower hitch frame. The CM2160 is designed to work with a standard, category 3 quick hitch.



WARNING

Before leaving the tractor seat, always engage the tractor brake and/or set the transmission of the tractor in parking gear. Stop engine and remove key. Always make sure that no one is between the tractor and the mower when tractor is in motion.

- ✓ Attach driveline to tractor (PTO shaft). (See below for instructions)
 - Verify that the shaft is sufficiently lubed before attachment.
 - Verify that drive shaft is the proper length.
- ✓ Connect (8) hoses to bulkhead on the hitch frame and to the corresponding tractor remote outlets on the tractor. Note: 2950 PSI Max. Pressure and 4 to 7 GPM flow.
- ✓ Connect oil cooler control to 12-volt system.
- ✓ Raise all jack stands before moving mower.

Assembly and Installation

Driveshaft Installation on PTO

WARNING

Never attempt any checks, repairs or adjustments with the tractor engine running or the PTO engaged. Adjustment of rotating parts with tractor engine running may result in severe personal injury or death if the PTO accidentally engages.

- ✓ Lift tractor PTO guard.
- ✓ Pull U-joint guard back along driveshaft.
- ✓ Press driveshaft yoke plunger in and slip driveshaft U-joint yoke onto splined PTO shaft. Ensure that yoke plunger returns to locked position.
- ✓ Position U-joint guard over driveshaft U-joint.
- ✓ Lower tractor PTO guard.
- ✓ Fix shaft guard to tractor with anti-rotation chain.

Hydraulic System Setup

IMPORTANT

The hydraulic system setup information contained in the following sections should be used only as a guide. Consult your local Hardee dealer or mower manufacturer for more detailed information.

Working Safely with Hydraulic Lines

Purge all air from hydraulic system before attempting to raise or lower the mower boom and deck.

DANGER

Stand clear if lowering or raising deck, hydraulic deck can fall suddenly from system failure.

DANGER

Do not use your hand or skin to check for hydraulic leaks, use cardboard or wood. High-pressure oil leaks can penetrate skin causing injury and gangrene. Consult a doctor immediately. Always wear safety goggles when working around high-pressure lines.

Description of Operation

The CM 2160 is designed as a “Tractor-Contained” main hydraulic system. This means that the tractor powers all hydraulic cylinder functions (swing, first stage boom lift, second stage boom lift, and mower deck tilt), and the mower pump powers the motor function, which in turn drives the mower head.

Basically, all cylinder functions are actuated by the “Tractor-Contained” control valves, whereas the motor function is activated by the PTO control lever on the tractor.

Operation Instructions

During Operation

WARNING

Ensure that all bystanders are clear of the cutter before starting tractor engine. Objects thrown by the cutter blades can cause severe personal injury or death.

Before any operation of the mower, be familiar with the locations and functions of the unit's controls. Being familiar with the mower and its controls will increase efficiency and reduce the possibility of serious injury or damage to the unit.

The operator should work slowly and carefully until he feels comfortable with the mower. Speed and skill will be attained much more easily if the necessary time is spent to familiarize yourself with the mower and its operation.

Get into the habit of completing a walkaround inspection before use. This procedure is a simple method of inspecting your unit's condition by walking around and looking at each component of the unit, including the tractor. This procedure has been used by airline pilots for many years as a final inspection before flight and is also used by long distance ground transportation drivers on buses and trucks. During the walkaround, you will visually search your units tire condition, look for hydraulic leaks, fuel leaks, inspect hose condition and condition of hydraulic cylinders. Look for loose or worn components, see that all guards are in place, check blade condition, look for broken or inoperative lights and determine that it is or is not operable before use. We recommend that you follow this procedure before start up.

Daily Start-Up Checklist		
	Check	Section
<input type="checkbox"/>	Check All Fluid Levels on the mower, <i>For best results, use Hardee hydraulic oil – part number 10373</i>	-
<input type="checkbox"/>	Grease Points	Page 14
<input type="checkbox"/>	PTO Shaft, Check Grease	Page 14
<input type="checkbox"/>	Blade Tightness	Page 15

Operating Environment

Application Do's and Don'ts

There are obvious and hidden potential hazards in operating this mower. **REMEMBER!** This machine is often operated in rough terrain conditions that include gullies, holes, slopes and hidden obstructions. Serious injury or even death may occur unless care is taken to assure the safety of the operator and bystanders in the area.

Included here is a list of safety messages, which should be followed. Observing these messages and using common sense learned from experience help eliminate the hazards of operating this and other machinery.

DANGER

*Read this manual and the manual for the tractor carefully to acquaint yourself with both machines before operating. **REMEMBER,** power-driven equipment should be operated only by those trained and familiar with the operation and instructed to do so. Working with unfamiliar equipment or in unfamiliar conditions can lead to accidents.*

WARNING

Before leaving the tractor seat, always engage the tractor brake and/or set the transmission of the tractor in parking gear. Stop engine and remove key.

DANGER

Never allow riders on tractor or equipment. Falling off can cause serious injury or death.

WARNING

Worn or dull mower blades can cause excessive mower vibration resulting in damage to the gearbox and structural damage to the mower. You should replace or sharpen blades in pairs. Excessive vibration can cause rotating parts to break and fly off the mower, causing serious injury or death to the operator or bystanders.

DANGER

Do not modify or alter this machine or any of its components or any equipment function without consulting EVH Manufacturing Company.

Using Your Mower

Getting Started

You will need to spend some time getting the “feel” of your new mower. Spend time reviewing the following steps before using your mower for the first time. The time that you take will greatly enhance your ability to get the desired results when you begin mowing.

- ✓ The first step is to attach the mower to the tractor, see the hook-up procedures on page 8 for complete instructions. After you have the mower attached, double check to ensure that no part of the tractor is in contact with the mower.
- ✓ Next, follow the instructions for installing the driveshaft on page 8. Check to see that all PTO guards are in place correctly.
- ✓ Make sure that all hoses and the electric connection cables will not contact the PTO shaft. (Use tiewraps to secure hoses and electric cable).
- ✓ Check the blades for sharpness. Check the blade carrier castle nut and both blade bolts for tightness. Verify that the gate valve under the oil tank is “on”. *The cutter is shipped with the gate valve in the “off” position.*

Danger

Before proceeding, make sure that no other persons are in close proximity to the mower!

- ✓ With all controls in neutral, the tractor in park, the throttle in idle position, start the tractor engine.
- ✓ Now with the mower under power, practice using the tractor’s hydraulic control valves to regulate the movement of the mowerhead and boom arms.

After you feel comfortable with the basic mower controls, the next step is to start the blades:

- ✓ Slowly engage the PTO shaft.

Danger

Do not change the blade rotation direction! Blades must rotate in the clockwise direction indicated by the rotation decal on the mowing deck.

- ✓ After the mower is running smoothly, increase the tractor to 800 PTO RPM (Max.1000 RPM) and lift the mowerhead off the ground. Swing the mowerhead to the mowing position, which is three o’ clock on the right side of your tractor. (If moving in reverse, swing deck back 15°).
- ✓ Release the tractor from park and put the transmission in low range. You are now in mowing mode and are underway.

The terrain and the kind of material being cut will determine your ground speed. Remember that you will need to raise and lower the mowerhead to follow the ground contour you are cutting.

Boom Breakaway

The CM2160 is designed with an automatic breakaway system to protect the mower booms. This works when the mowerhead contacts a solid obstruction or the mowerhead is “grounded” while the tractor is in motion. The breakaway is activated through the hydraulic valve and will function mowing both forward and backward.

When the mowerhead strikes a solid object the booms will begin to break back, **IMMEDIATELY** stop your tractor and adjust the position of the booms to clear the object.

If you “ground” the mowerhead and the booms begin to break back, simply lift the boom slightly to free the mowerhead, then swing the boom back into normal cutting position. See figure 3.

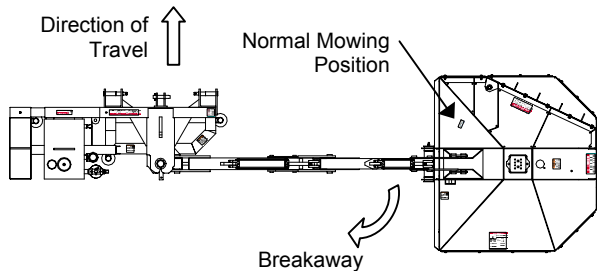


Figure 3

Mowing in Reverse

Your Hardee unit can cut as easily when the tractor is moving in reverse as forward. The breakaway protection works in the same way. The only difference being you must swing the booms to the rear 10 – 15 degrees. This will allow for more boom breakaway travel. This space is critical so as not to bottom-out the boom arm. See figure 4.

Caution

You will do severe damage to your mower if you allow the boom arm to reach the bottoming-out point!

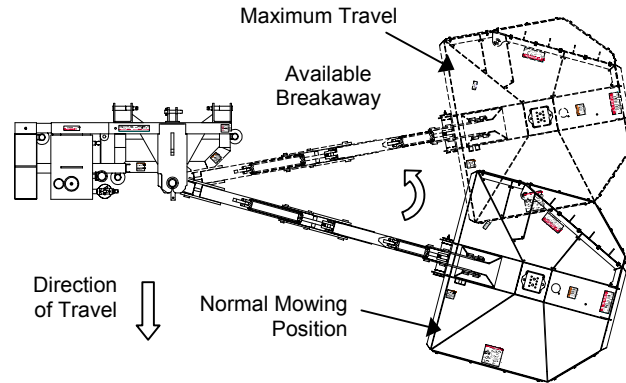


Figure 4

Caution

You must allow for the extra boom travel when mowing in reverse. See figure 3. If you have any questions about these instructions, please ask your local Hardee dealer immediately! Warranty claims for equipment used improperly will not be accepted.

Side Dressing Trees

The design of your heavy-duty brush mower will allow you to “side dress” trees if needed. To do this, raise the booms to the desired height and tilt the mowerhead to the vertical position. With the blades “on” move forward slowly, removing only approximately 12 inches of material per pass.

DANGER

Never operate the mower within 10 feet of overhead power lines or utility lines. Do not trim trees with power lines running through them. Serious injury or death by electrocution may occur.

Cutting Larger Brush and Trees

A unique feature on the CM2160 is the mowerhead “HINGED GATE”. The “HINGED GATE” is used when you need to remove trees as large as 6 inches in diameter. This is accomplished in the following manner:

- ✓ Be sure that the mower blades and tractor are turned “OFF”.
- ✓ Unlock the “HINGED GATE” by removing the two bolts. Refer to Figure 5 & 6 on Page 13 .
- ✓ Replace one bolt on the main deck for storage and use the second bolt to lock the gate in its raised up position.

Operation Instruction



Figure 5

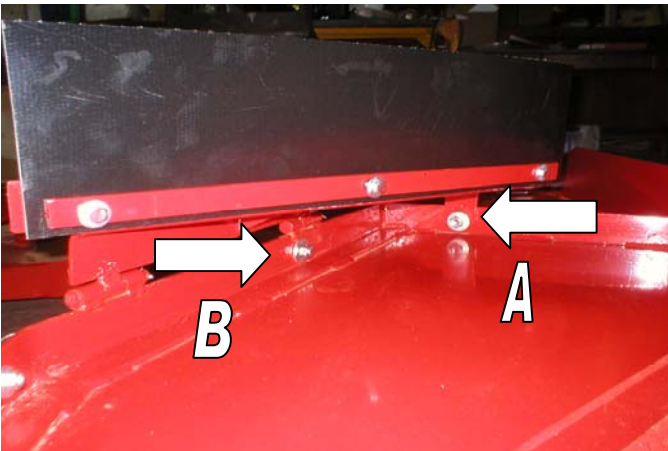


Figure 6

Figure 6 shows the two sets of bolts, nuts and washers that go on the “HINGED GATE”. Bolt A is used to lockdown the hinged gates to the CM2160 DECK when cutting trees and bolt B is tightened onto the deck for storage during the tree-cutting process.

DANGER

Never attempt to use the mower to remove brush or trees larger than 6 inches in diameter. Failure to use caution when cutting trees, may lead to the tree falling on the tractor/mower deck and tipping the tractor over.

Hydraulic Oil Cooler (Air Cooled)

1. The oil cooler built into the hydraulic circuit of your CM2160 mower is designed to maintain fluid temperature and viscosity within optimum limits.
2. Hydraulic oil temperatures are affected by mode of operation (excessive operation over the relief

valve settings and/or operating in high ambient temperatures).

3. Excess heat sooner or later creates trouble for any hydraulic system. Too much heat breaks down oil, damages seals and bearings, and increases wear on pumps, motors and other components.
4. Hardee specifies hydraulic oil part number 10373. The oil has a viscosity grade of ISO VG68. This means that the hydraulic oil temperature should read at least 60° F before full operation of the CM2160 can start (circulate the hydraulic oil at engine idle without engaging in any mowing operation).
5. Once started the mowing operation, the oil temperature should not exceed 180° F (optimum temperature is 167° F). The thermostatically controlled fan on the oil cooler turns on at 140° F. Care must be taken that the starting point of the fan corresponds' to the oil temperature gauge on the oil tank.

Unhook and Post Use Care

Before unhooking the tractor from your mower, always clean the unit thoroughly to remove any grass, mud or debris. This mower should always be stored on a hard level surface.

Unhooking the CM2160

- ✓ To unhook from your unit, first lower all jack stands to the storage position.
- ✓ Lower the tractor lift arms so that the mower will rest firmly and evenly on all jack stands.
- ✓ Lower the boom arms and mower deck so that they too rest firmly and evenly on the ground.
- ✓ Be sure to relieve all hydraulic pressure on the boom arms and deck before unhooking.
- ✓ Disconnect driveshaft from tractor.
- ✓ Disconnect oil cooler electrical cables at the bulkhead connector.
- ✓ Disconnect the (8) hydraulic hoses from the tractor remotes.
- ✓ Unhook tractor hitch from 3-point frame on mower.

Post Use Care

- Never leave driveshaft hanging down and touching the ground.

Maintenance and Service Schedule


This section is dedicated to the maintenance of the CM2160. As with any piece of equipment, the performance and life span depends on the proper operation and maintenance.

⚠ DANGER

Never attempt any checks, repairs or adjustments with tractor engine running or the power take-off engaged. Adjustment of rotating parts while the tractor engine is running can result in serious personal injury or death if the PTO accidentally engages.

First Stage Boom

Inject with heavy multi-purpose grease. There are five grease fittings on the swing post.

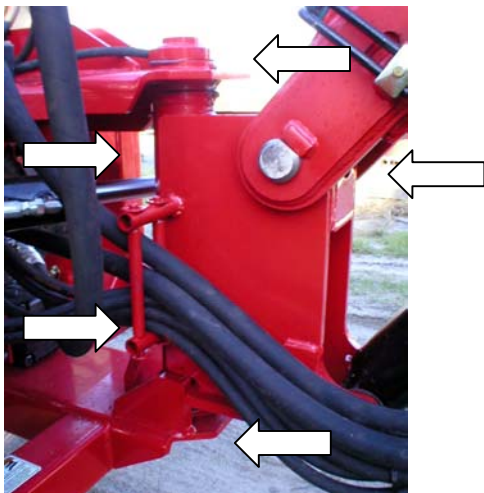


First Stage Boom to Second Stage Boom

Inject with heavy multi-purpose grease. *There is a grease fitting at every hinge point.*



Deck and Second Stage Boom

Inject with heavy multi-purpose grease.

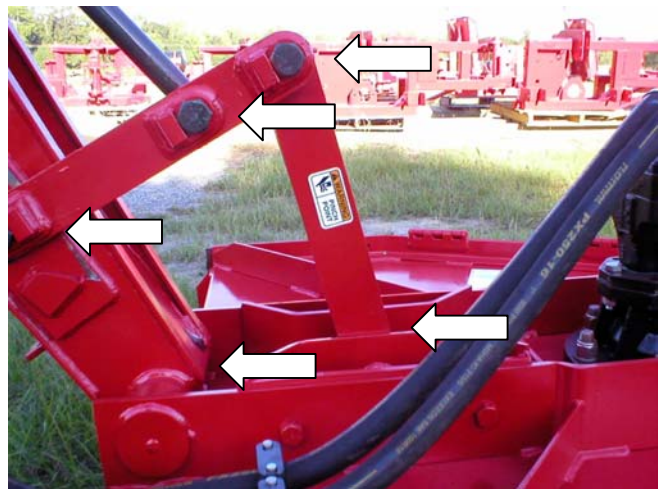


Hydraulic Motor Housing Assembly

Locate fitting on the motor housing. Inject with 90W-gear oil.



Greasing PTO Driveshaft to Pump

Remove PTO shaft from mower before greasing. Use heavy multi-purpose grease at all grease fitting and on shaft. Remember to grease the shield grease fittings as well as the u-joints.

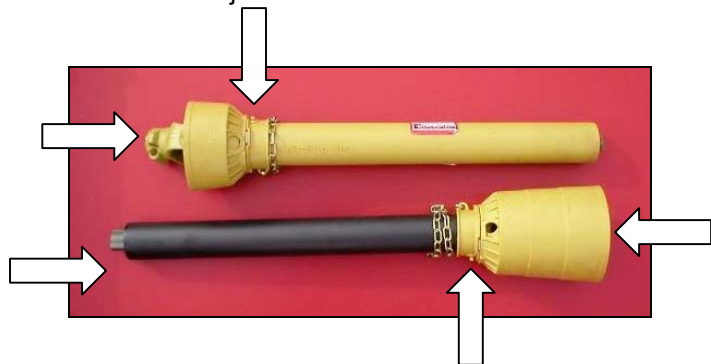

Inspection and Replacement of Blades

The cutting blades on the Hardee mower are designed and made to exact specifications and should be replaced with only original Hardee parts. Always replace blades in pairs to retain balance on the blade holder. Never weld the blades, as this will change the temper of the steel. Never modify the blades. Check for cross sectional thickness (5/8") and deterioration of blades. Replace as necessary.

When the replacement of mower blades is required, a few rules should be followed:

- Replace blades in pairs.
- Inspect bolt holes.
- If bolt holes are elongated, replace blade holder. *See instructions below.*
- Cutting heavy brush causes excess stress on the blade bolts, because of this they will require inspection that is more frequent.
- When replacing blades always replace bolts and nuts. Never reuse blade bolts and nuts.

Inspection and Replacement of Blade Holder

Inspection

- ✓ First, completely extend boom. Rotate mower deck all the way up; lower boom until deck rests on ground. Switch off tractor, secure parking brake and remove key.
- ✓ When inspecting, pay particular attention to any small hairline cracks between spindle bolt hole and blade bolt holes. This indicates metal fatigue from severe abuse and holder must be replaced.
- ✓ Blade and spindle bolts and nuts should be checked daily.

Replacement

- ✓ Remove cotter pin and castle nut.
- ✓ With an assistant, carefully remove the blade holder.
- ✓ Then position the new blade holder in place.
- ✓ Replace the castle nut and cotter pin. *See parts breakdown drawing on Pages 21-24 for reference.*

Checking the Main Relief Valve

The CM2160 is equipped with a mowerhead relief valve that comes pre-set from the factory. This valve is attached to the top of the pump (see illustration on hydraulic circuit schematic). Before checking the pressure on the valve, make certain that a clean filter is installed and that the reservoir contains the correct amount of hydraulic oil.

The procedure to check the pressure on the cutterhead relief is as follows:

- ✓ Start the tractor and with the tractor in park, place the mowerhead on the ground. Engage the tractor PTO to power the mowerhead and increase engine speed until 1000 PTO RPM is reached. Allow the mower to run at this speed for 3 to 5 minutes.
- ✓ Disengage the PTO and stop tractor engine.
- ✓ Remove the pump pressure line. Install a 3000 or 5000 psi pressure gauge into the 16-M-JIC outlet. The gauge should block off the pump outlet downstream of the relief valve. Place the loose pressure line in a clean container to catch any spillage.



Caution

Be sure all fittings are tight before proceeding!

- ✓ Start the tractor engine and increase engine speed to 1200 **ENGINE** RPM. Engage tractor PTO and immediately observe the pressure reading and disengage tractor PTO. (If pressure reads 2700 psi or less, you may proceed.)
- ✓ Increase tractor engine speed to 1000 PTO RPM. Engage tractor PTO and immediately observe the pressure reading and disengage tractor PTO.

The correct pressure setting is 2700 psi. If the reading is less than 2200 or more the 2700, contact your local Hardee dealer for assistance.



Caution

Never let the unit operate in the blocked-off pump outlet position for over 5 seconds. A reading can be obtained accurately in this amount of time.

- ✓ Now you can remove the gauge, and re-install the pump pressure line.

 **CAUTION**

Never vary from the 2700-psi mowerhead pressure. Failure to comply with this specification will cause severe hydraulic heat, loss of power and damage to components.

 **DANGER**

Exceeding 2700 psi will cause premature hose failure (rupture), and possible bodily injury or property damage.

Checking the Tractor's Cylinder Control Valve

The procedure for checking the pressures on the cylinder control valve is as follows:

Cylinder Relief Valve

- ✓ Rest the deck of the CM2160 on the ground to relieve all pressures on the hydraulic lines.
- ✓ With the tractor engine off and parking brake set, remove the hydraulic test port plug. Install a 3000 or 5000 psi pressure gauge into the hydraulic test port and place the gauge where you can easily see it from a safe distance.
- ✓ Start the tractor and bring the engine up to operating speed 800 (Max.1000) PTO RPM. Activate the tractor control valve, raise the mower deck off the ground, and swing the boom so that it is straight behind the tractor.
- ✓ Activate the control valve in the "HEAD UP" position until the deck cylinder fully retracts. Continue to hold the control valve in this position for not more than 5 seconds at a time, and have someone read the pressure on the gauge.

 **WARNING**

*While reading the gauge, be careful not to stand in an area where inadvertent movement of the booms could trap or crush you. If you fail to heed this warning, **SERIOUS INJURY OR DEATH COULD OCCUR.***

The correct pressure setting for the cylinder relief should be 2800 PSI +/- 150 PSI. The hydraulic flow should be set between 4 and 7 GPM. To increase or decrease pressure or flow, follow the instructions in your tractor manual.

- ✓ When the adjustment is complete, rest the mower deck back on the ground to relieve pressure in the hydraulic lines. Remove the pressure gauge and re-install the hydraulic test port plug.

If you need assistance, contact your local Hardee dealer.

Hydraulic Oil Cooler (Air-Cooled)

1. The unit should be inspected regularly for corrosion and dirty or clogged heat transfer surface. Dirt and dust can be removed by washing, brushing or blowing out with compressed air. Greasy surfaces can be brushed or sprayed with a non-flammable degreasing fluid that is safe for use on aluminum. Follow with a hot water rinse and dry thoroughly.
2. Once a year, or as required by the application, piping should be disconnected and a degreasing agent circulated through the unit to remove sludge from turbulators and internal surfaces to return the unit to full capacity.
3. DC motors are not serviceable and must be replaced. Replacement fan/motor assemblies are available from your dealer.

Routine Maintenance Checklist

Interval	Item	Check	Lube	Change	Comments
Daily Or 10 Hours	Pump Drive Shaft		•		
	Pivot Points		•		
	Grease Fittings		•		
	Blades	•			Change If Damaged
	Blade Bolts (Blade To Disk)	•			
	Blade Holder Nut	•			
	Spindle Bolts (Spindle To Deck)	•			
	Main Frame And Deck Bolts	•			
	Rubber Shielding	•			Change If Damaged
Weekly Or 50 Hours	Hydraulic Return Filter			•	Change After 1st 50 Hours, Then Every 500 Hours
	Hydraulic Fittings	•			
Monthly Or 150 Hours	Tank Breather	•			
	Hydraulic Fluid Level	•			
Seasonal Or 500 Hours	In Tank And Return Hydraulic Filters			•	

Troubleshooting Guide

Hydraulic System, Blade System, Pump, Motor, Fluid Lines

Problem	Possible Cause	Solution / Correction
Cylinder Will Not Operate	Tractor Control Valve Not Functioning	Examine Bulkhead Connection to Mower; Repair Valve
Head will not Swing	Improper Tractor Valve Setting Too Low or Too High	Adjust Tractor's Valves To Specifications 2950 PSI Max. and 4 to 7 GPM flow.
	Breakaway Valve Open	Check Setting(1100 PSI) Replace
	Cylinder Leakage	Repair / Replace Cylinders
Head Drifts Back When In Operation	Improper Tractor Valve Setting	Adjust Tractor's Valves To Specifications 2950 PSI Max. and 4 to 7 GPM flow
	Cylinder Leakage	Repair / Replace Cylinders
Boom Drifts Down	Improper Tractor Valve Setting	Adjust Tractor's Valves To Specifications 2950 PSI Max. and 4 to 7 GPM flow
	Cylinder Leakage	Repair / Replace Cylinders
Leaking Motor	Motor Seal Blown	Repair / Replace Seal And Check Filter For Blockage (Repair / Replace Filter)
Blades Lose Speed In Cutting	Improper Relief Valve Setting	Check Relief Valve Setting (Refer To Pages 15 & 16) Repair / Replace Relief Valve
	Poppet Valve in Motor	Check/Replace Poppet Valves in Motor
Pump Whines	Worn Or Damaged Pump	Repair / Replace Pump (Make sure gate valve is open)
	Improper Oil In System	Replace Oil
		Requires Hardee Oil Part NO 10373 Or Comparable Oil With Proper Viscosity
	Pressure Setting on Relief Valve Too Low	Check Relief Valve Setting (Refer to Pages 15 & 16)
Motor Whines	Worn or Damaged Motor	Repair / Replace Motor
	Improper Oil In System	Replace Oil Requires Hardee Oil Part NO 10373 Or Comparable Oil With Proper Viscosity
	Pressure Setting On Relief Valve Too Low	Check Relief Valve Setting (Refer To Pages 15 & 16)
Motor Seal Continually Blows Out	Internal Poppet Valve Damaged	Replace Poppet Valves
Unit Vibrates Severely	Broken Blade	Replace Blades, Blade Bolts And Nuts (Refer To Page 15)
	Blade Holder Loose	Repair / Replace Blade Holder (Refer To Page 15)
	Loose Output Shaft	Repair / Replace Shaft's Bearings In Cutter Head Housing
Mower Head Grinds And Roars When Operating	Worn Bearings Or Improper Lubrication In Mower Hydraulic Motor Housing	Repair / Replace Components (Bearing, Seals And Housing) As Required

Troubleshooting Guide, continued




Hydraulic System, Blade System, Pump, Motor, Fluid Lines

Problem	Possible Cause	Solution / Correction
Individual Cylinders Leak Down	Blown Or Worn Cylinder Packing	Repair / Replace Cylinder
Relief Valve Will Not Adjust To Specifications	Defective Or Worn Valve Seat	Repair / Replace Relief Valve And Adjust To Specifications
	Worn Pump	Replace Pump
	Gate Valve Closed	Open Gate Valve
	Hydraulic Valve Cracked Internally	Repair / Replace Valve
	Improper Oil	Repair / Replace Oil (Use Hardee Oil Part No. 10373)
Filter Gauge Is In The Red At All Times	Filter Restricted	Repair / Replace Filter
	Bad Gauge	Repair / Replace Gauge
	Hydraulic Oil Too Heavy For Region Or Climate	Replace Oil
PTO Shaft Won't Telescope	PTO Shaft Not Lubed Properly	Lube Driveshaft (Per Daily Routine Check Sheet On Page 14)
	Bent Shaft	Replace PTO Shaft
Excessive Slack In Boom Hinges	Pins Worn	Repair / Replace Pins
Beams Squeak When Operating	No Lubrication Or Improper Lubrication	Lube Hinge Points (Per Instructions On Page 14)
	Defective Lube Fittings	Repair / Replace Fittings
Boom Operates Erratically	Speed Is Too Fast	Call HARDEE Dealer
	Defective Tractor Control Valve	Follow Tractor's Manual Instructions
	Air In Lines	Purge Hydraulic Lines
Blades Won't Start-Up	Oil Flow Restricted	Open Gate Valve
		Repair / Replace Hydraulic Lines
		Replace In-Tank Filter

Summary of Specifications

Model	CM2160
Approximate Weight (lbs.)	5,250# - Ready To Mow
Blade Tip Speed (ft/min)	800 PTO RPM – 15,200 ft/min
	1000 PTO RPM – 19,000 ft/min (Max.)
Blades	5/8 x 12" Free Swinging
Cutting Capacity / Suggested Usage	Grass, Heavy Brush Up To 6" In Diameter
Cutting Width	60"
Deck Height	12"
Deck Thickness	7 Gauge
Driveline	Category 4/5
Driveline Protection	Hydraulic Relief Valve
Hitch	Standard Hitch, Category 3 Quick Hitch
Motor	Hydraulic Vane Motor
Overall Length (MAX.)	Approximately 316"
Overall Width	Approximately 86"
Transport Width	92"
PTO Operating Speed	750 to 1000 RPM
Pump	Hydraulic Spring Loaded Vane Pump
Rubber Shielding	Standard – Front & Rear
Skids	Standard – Weld On
Tractor Weight Required	15,500 lbs. And Up
Tractor HP Required	150 And Up
Hydraulic Oil System Capacity	55 Gallons (Hardee 403 Oil Type)
Controls	Tractor-Controlled 2950 PSI Max. and 4 to 7 GPM flow
Allowable System Working Pressure	2950 PSI
Hydraulic Filtration	Replaceable 100 Micron Mesh Strainer and Spin on Filter (10 micron)
Hydraulic Oil Cooler With DC Fan Assembly	Heat Rejection: 40,000 BTU/HR @ 100 F – ETD (Entering Temperature Difference) with 25 GPM Oil Flow

WIRING HARNESS FOR
OIL COOLER FAN
P/N-16431

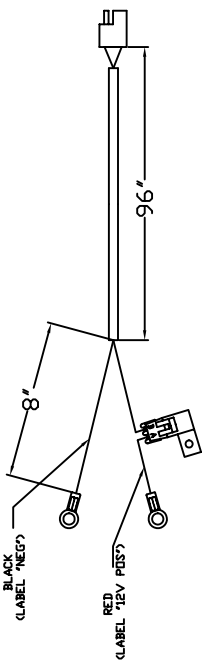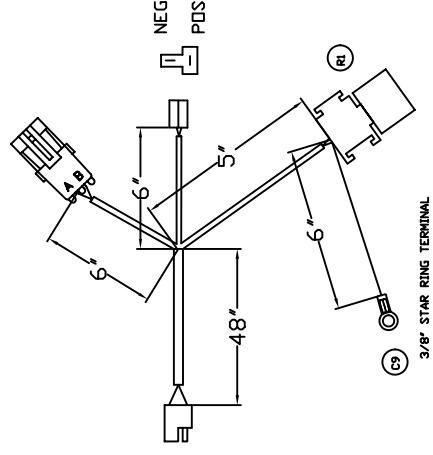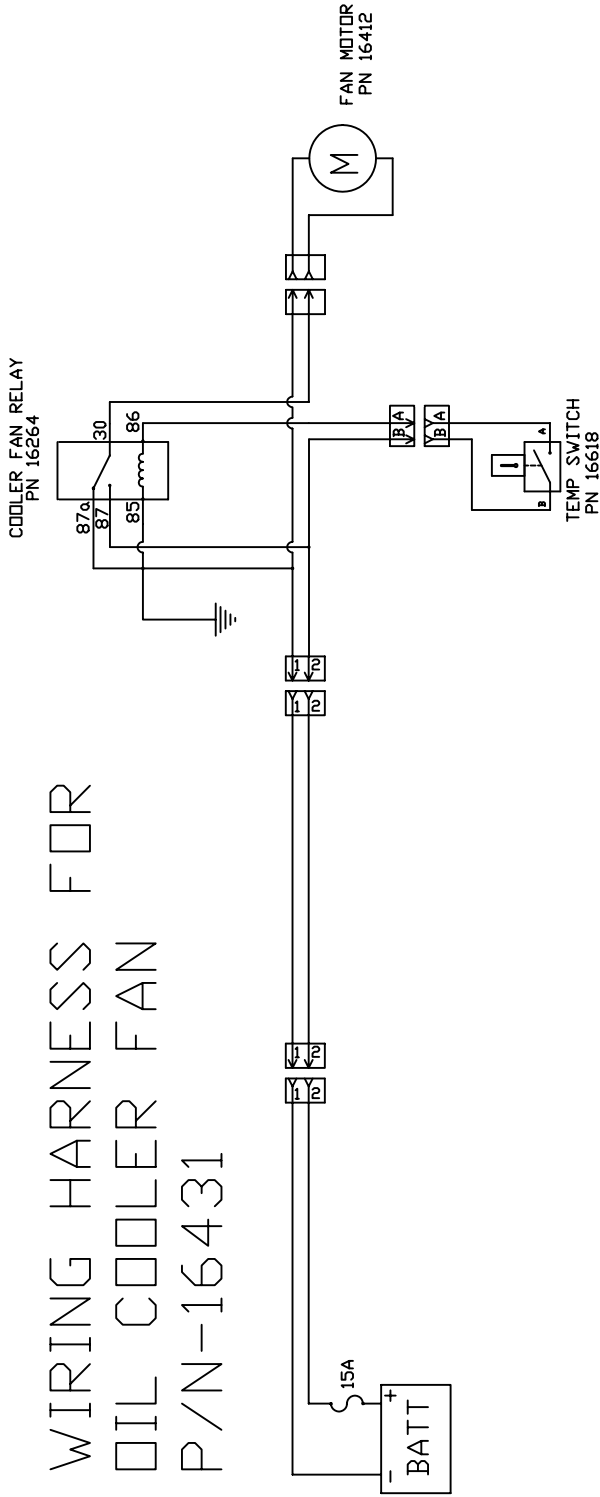

DWG. NO.	26750		REV.	G
REV	CHANGE	BY	DATE	ECN
-	The rev. letter of this drawing has been increased to match that of hydraulic schematics.	T. B. B.	10/20/14	---
D	16682 WILL REPLACE 10375 & 16435	T. B. B.	10/20/14	1578
E	Oil Cooler Support Bracket added to drawing (WAS NOT LISTED/ SHOWN).	T. B. B.	12/31/14	1591
F	STAND WELD REPLACED(23160 WAS 23038)	T. B. B.	1/15/16	1620
G	REMOVED 26763 & 26776, ADDED 16957, 26767 + MISC. HARDWARE.	M. J. Z.	9/27/21	1797

164	26850	1	BOLT- BREAK-AWAY
165	26855	1	FAN GUARD WELDMENT, OIL COOLER

Item	Part Number	Qty.	Description	113	16420	4	Thin Hex Nut 1"-8 Thread, 1-1/2" W, 35/64" Ht.
1	10002	2	HEX BOLT, 1/4-20 X 1 Gr.5 PLATED	114	16421	4	HEX LOCKNUT, 1"-8 Gr.8 Nylon-Insert
2	10003	20	HEX BOLT, 1/4" X 1-1/2" Gr. 5 PLATED	115	16422	1	HEX BOLT-HR2160 1" X 8" LG.
3	10018	7	Hex Bolt 5/16" X 1 1/2" gr.5 Plated	116	16424	2	BOLT-HR2160 1-1/2" X 12-1/2" LG.
4	10031	2	HEX BOLT, 3/8-16 X 1 GR. 5 PLATED	117	16431	1	WIRING HARN., OIL COOLER (NOT SHOWN)
5	10032	7	HEX BOLT, 3/8 x 1-1/2 Gr.5 PLATED	118	16432	1	90 DEG 1/2" M-JIC/M-ORB (PAINTED RED)
6	10034	1	HEX BOLT, 3/8" x 2-1/2" Gr.5 PLATED	119	16433	3	90 Deg. Fitting w/ .062 Restriction (Black)
7	10071	4	HEX BOLT, 1/2" X 1" Gr.5 PLATED	120	16568	2	BOTTOM HITCH PIN FOR HYD, CAT 3
8	10074	4	HEX BOLT, 1/2" X 2-1/2" Gr.5 PLATED	121	16617	1	OIL COOLER
9	10092	2	HEX BOLT, 5/8" X 2" Gr.5 PLATED	122	16618	1	TEMPERATURE SWITCH
10	10093	2	HEX BOLT, 5/8" X 2-1/2" Gr.5 PLATED	123	16682	1	RELIEF VALVE ASM - 2700PSI - Pump Mounted
11	10111	4	HEX BOLT, 3/4"-10 X 2" Gr.5 PLATED	124	16683	1	Relief Valve 2700PSI - w/TAMPER PROOF CAP
12	10154	1	LOCKNUT, 5/16"-18 PLATED	125	16685	4	Screw, 7/16-14 X 2-1/4 long - Zinc Plated
13	10162	2	HEX NUT, 3/8" (Gr.5 PLATED)	126	16686	4	LOCK WASHER, Zinc Plated 7/16 High Collar
14	10166	4	LOCKNUT, 5/8"-11 PLATED	127	16697	1	#4 ORB HOLLOW HEX PLUG
15	10168	4	LOCKNUT, 3/4"-10 Gr.5 PLATED	128	16957	1	MOUNTING COLLAR, ACCUMULATOR
16	10175	8	LOCKNUT, 3/8"-16 Gr.5 PLATED	129	16988	2	Lynch Pin (Cat.3)
17	10176	4	LOCKNUT, 1/2" (Gr.5 PLATED)	130	20031	1	ACCESS COVER
18	10181	1	LOCK WASHER, 5/16" PLATED	131	22710	1	SHORT BELTING FLAT
19	10182	2	LOCK WASHER, 3/8" PLATED	132	22833	1	FLUID CONNECTOR WELDMENT
20	10185	2	LOCK WASHER, 5/8" PLATED	133	23130	1	PIVOT SLEEVE
21	10186	4	LOCK WASHER, 3/4" PLATED	134	23131	1	END CAP WELDMENT
22	10200	2	FLATWASHER, 1/4" PLATED	135	23160	2	STAND WELDMENT, 17-7/8" Tall
23	10202	15	FLATWASHER, 3/8" PLATED	136	23345	1	HEAD MOUNTING BRACKET WELDMENT
24	10206	8	FLATWASHER, 3/4" PLATED	137	25629	1	BRACE SUPPORT 3-1/2" x 3-1/2" x 66" LG.
25	10207	10	FLATWASHER, 1" PLATED	138	25660	1	HR2360 BELTING EXTENSION KIT
26	10252	2	COTTER PIN, 3/16" X 2" PLATED	139	25662	1	HR2360 / CM2160 Belting Kit
27	10335	1	HARDEE RED PAINT - (NOT SHOWN)	140	25664	1	HR2360 Front Corner Belting
28	10336	1	GEAR OIL [85W-140J] - (NOT SHOWN)	141	25670	1	OIL TANK WELDMENT - HR2360
29	10339	2	POP RIVET	142	25680	1	WEIGHT BOX WELDMENT
30	10368	1	GATE VALVE, 1-1/4"	143	25686	2	STAND TUBE WELDMENT, HR2360
31	10373	1	HYDRAULIC OIL	144	25700	1	DECK WELDMENT, HR2360 HD
32	10387	1	O-RING, 1/8"	145	25724	2	CYLINDER PIN WELDMENT
33	10390	4	CLIP PIN (1/8 x 2)	146	25857	1	OIL COOLER SUPPORT WELDMENT
34	10393	2	UNIVERSAL CLIP PIN	147	26751	1	ASSEMBLY - HITCH FRAME - CM2160
35	10501	1	FLOW EZY BREATHER	148	26753	1	WELDMENT - 1ST STAGE - CM2160
36	10646	1	GREASE	149	26754	1	2ND STAGE BOOM WELDMENT
37	10872	2	PRESSURE FLANGE SET	150	26756	1	BREAK-AWAY WELDMENT W/ ROD TUBE
38	11005	1	DECAL, WARNING - Thrown Objects	151	26757	1	CYLINDER MOUNT WELDMENT - CM2160
39	11010	3	LARGE HARDEE LOGO DECAL	152	26760	1	WELDMENT- LINKAGE- BOOM W/STOPS- CM2160
40	11032	1	DECAL, SMALL HARDEE LOGO	153	26761	1	PLATE- CYL. MOUNT
41	11505	3	8-M-ORB X 8-M-JIC 90 DEG ELBOW	154	26762	1	BOOM TO DECK BRACKET WELDMENT
42	11506	6	LOCKNUT, 7/8"	155	26764	1	BOOM TO DECK BRACKET WELDMENT
43	11508	6	LOCK WASHER, 7/8"	156	26765	1	BLADE HOLDER ASM w/Blades-Sq. Holes
44	11675	1	FILTER ASSEMBLY, RETURN	157	26767	1	CHARGED ACCUMULATOR (1,300 PSI)
45	11727	1	SERIAL NUMBER PLATE	158	26788	1	Spacer (1" SCH 40 PIPE X 2-3/8")
46	11775	1	HYDRAULIC PUMP, 540RPM	159	26799	1	Spacer (1" SCH 40 PIPE X 1-3/8")
47	11848	1	O-RING	160	26843	1	PIN, FIRST STAGE
48	11850	1	DECAL, WEB SITE	161	26845	1	PIN, 2nd STAGE CYL.- ROD END
49	11860	10	TIE STRAP, (14" LG.) (100/PK)	162	26846	2	WELDMENT-2nd STAGE CYL.- ROD END
50	13535	4	STAIN. STEEL CLAMP, 1-1/2" TO 1-3/4"	163	26848	1	WELDMENT, PIN - DECK CYL.- ROD END
51	13563	1	1-1/4"-M-NPT X 1-1/2" Metal Hose Barb				
52	13632	1	METAL CAP, 1/4" NPT				
53	13697	1	1-1/4" NPT Female Threaded Elbow				
54	13758	1	20-M-NPT X 16-F-NPT Reducer				
55	13778	1	NIPPLE, 1-1/4" NPT X 3-1/2" Long				
56	13974	1	16-M-JIC X 16-M-NPT 90 Deg. Elbow				






MODELED BY	C. K. N.	3/15/11	DESCRIPTION	SHEET 1 of 9
CHECKED BY	K. H. N.	3/15/11	R.M.N.	
MATERIAL	N/A		CM2160 BOOM MOWER, COMPLETE	
Manufactured By:		EVH Mfg. Co., LLC		DO NOT SCALE
		DWG. NO. 26750		DWG. SIZE

Note:
This list of components is to be strictly viewed as a "BILL OF MATERIALS" of the "COMPLETE" mower. It is not related to any illustration.

HARDEE BY
EVH MFG. CO.
LORIS S.C.

All Dimensions in Inches Unless Otherwise Specified
Dimensions in [] are in Millimeters
Tolerance Unless Otherwise Specified
Fractional Dimensions: 1/16"
Decimal Dim. to Limits Shown
Angular Dimensions: 1°
All Holes to be +0.00/-0.02"

DWG. NO.	26750			REV.	G
REV	CHANGE	BY	DATE	ECN	
-	The rev. letter of this drawing has been increased to match that of hydraulic schematics.	T. B. B.	10/20/14	---	
D	16682 WILL REPLACE 10375 & 16435	T. B. B.	10/20/14	1578	
E	Oil Cooler Support Bracket Added to drawing (Wasn't listed/shown)	T. B. B.	12/31/14	1591	
F	STAND WELD. REPLACED(23160 WAS 23038)	T. B. B.	1/15/16	1620	
G	NO CHANGES ON THIS SHEET.	M. J. Z.	9/27/21	1797	

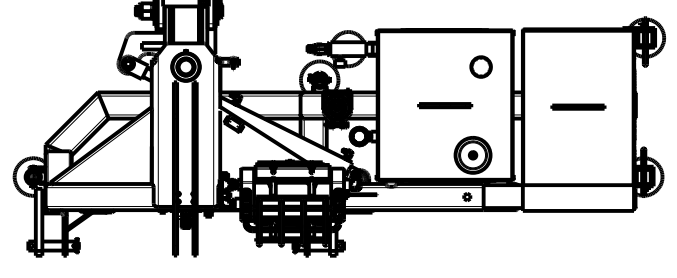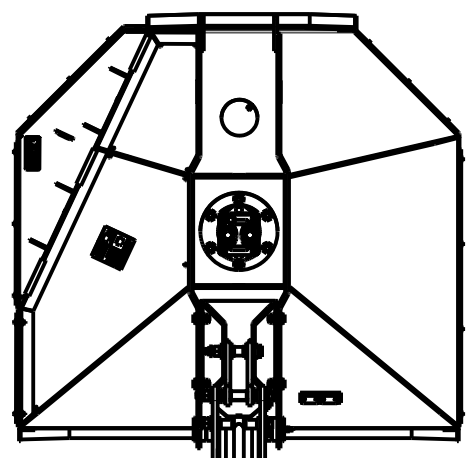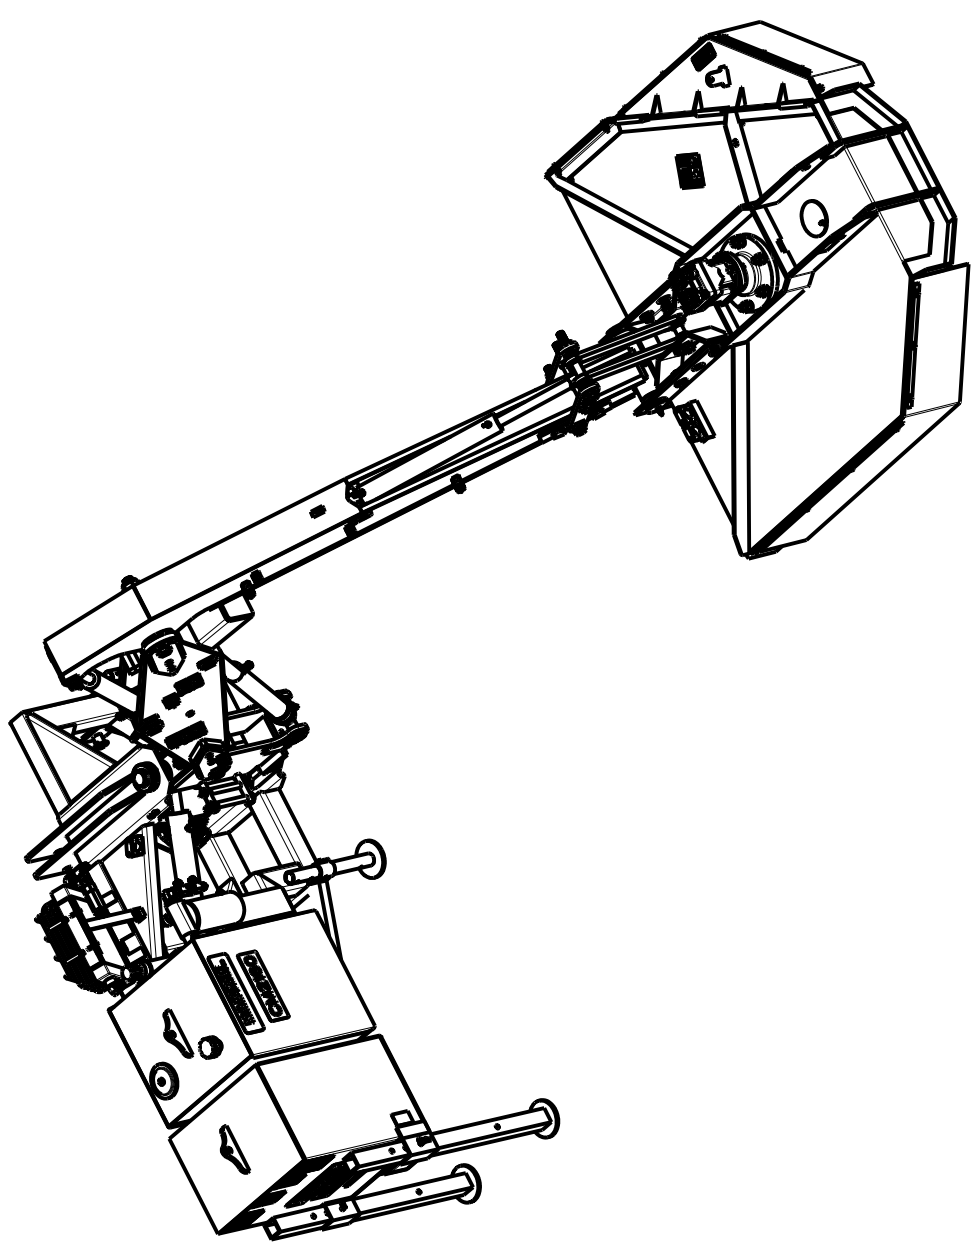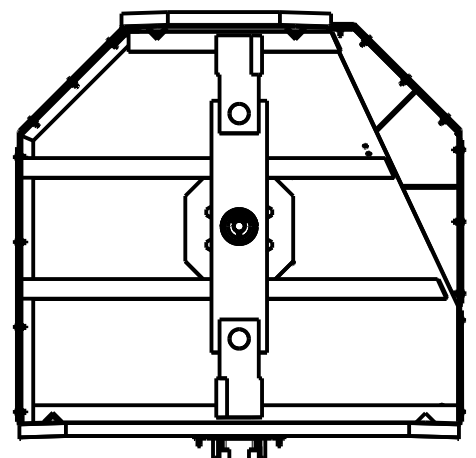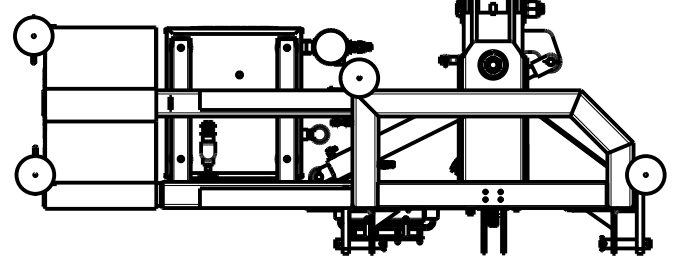


All Dimensions in Inches Unless Otherwise Specified
 Dimensions in [] are in Millimeters
 Tolerance Unless Otherwise Specified
 Fractional Dimensions: 1/16"
 Decimal Dim. to Limits Shown
 Angular Dimensions: 1°
 All Holes to be +0 -1/32"

MODELED BY	C. K. N.	3/15/11	DESCRIPTION	SHEET 2 of 9
CHECKED BY	K. H. N.	3/15/11		
MATERIAL	R.M.N.			
	N/A			
Manufactured By: EVH Mfg. Co., LLC			DO NOT SCALE	DWG. NO. 26750
			CM2160 BOOM MOWER, COMPLETE	

HARDEE BY
 EVH MFG. CO.
 LORIS S.C.

Item	Part Number	Qty.	Description
1	10003	4	HEX BOLT, 1/4" X 1-1/2" Gr. 5 PLATED
2	10032	2	HEX BOLT, 3/8 x 1-1/2 Gr.5 PLATED
3	10074	4	HEX BOLT, 1/2" X 2-1/2" Gr.5 PLATED
4	10093	2	HEX BOLT, 5/8" X 2-1/2" Gr.5 PLATED
5	10111	4	HEX BOLT, 3/4"-10 X 2" Gr.5 PLATED
6	10154	1	LOCKNUT, 5/16"-18 PLATED
7	10166	2	LOCKNUT, 5/8"-11 PLATED
8	10168	4	LOCKNUT, 3/4"-10 Gr.5 PLATED
9	10175	2	LOCKNUT, 3/8"-16 Gr.5 PLATED
10	10176	4	LOCKNUT, 1/2" (Gr.5 PLATED)
11	10181	1	LOCK WASHER, 5/16" PLATED
12	10186	4	LOCK WASHER, 3/4" PLATED
13	10202	4	FLATWASHER, 3/8" PLATED
14	10206	8	FLATWASHER, 3/4" PLATED
15	10336	1	GEAR OIL [85W-140] - (NOT SHOWN)
16	10872	2	PRESSURE FLANGE SET
17	11506	6	LOCKNUT, 7/8"
18	11508	6	LOCK WASHER, 7/8"
19	11848	1	O-RING
20	15251	4	1" HOSE CLAMP HALF
21	15255	2	COVER PLATE, HOSE CLAMP
22	15338	1	DANGER DECAL, EXPOSED BLADES
23	15845	1	DECAL KIT, HYDRAULIC
24	15845-6	1	DANGER DECAL (KIT 15845)
25	15852	1	RED REFLECTOR DECAL
26	15853	1	YELLOW REFLECTOR DECAL
27	15968	1	COTTER PIN, 1/4" x 3"
28	16060	1	HYDRAULIC MOTOR
29	16160	1	HOUSING, Hydraulic Motor, MDH-100
30	16209	1	Hex Slotted Nut - 1-3/4"-12UN
31	16421	1	HEX LOCKNUT, 1"-8 Gr.8 Nylon-Insert
32	20031	1	ACCESS COVER
33	22710	1	SHORT BELTING FLAT
34	25660	1	HR2360 BELTING EXTENSION KIT
35	25662	1	HR2360 / CM2160 Belting Kit
36	25664	1	HR2360 Front Corner Belting
37	25700	1	DECK WELDMENT, HR2360 HD
38	26757	1	CYLINDER MOUNT WELDMENT - CM2160
39	26765	1	BLADE HOLDER ASM w/Blades-Sq. Holes

Replacement O-Ring P/N 16075

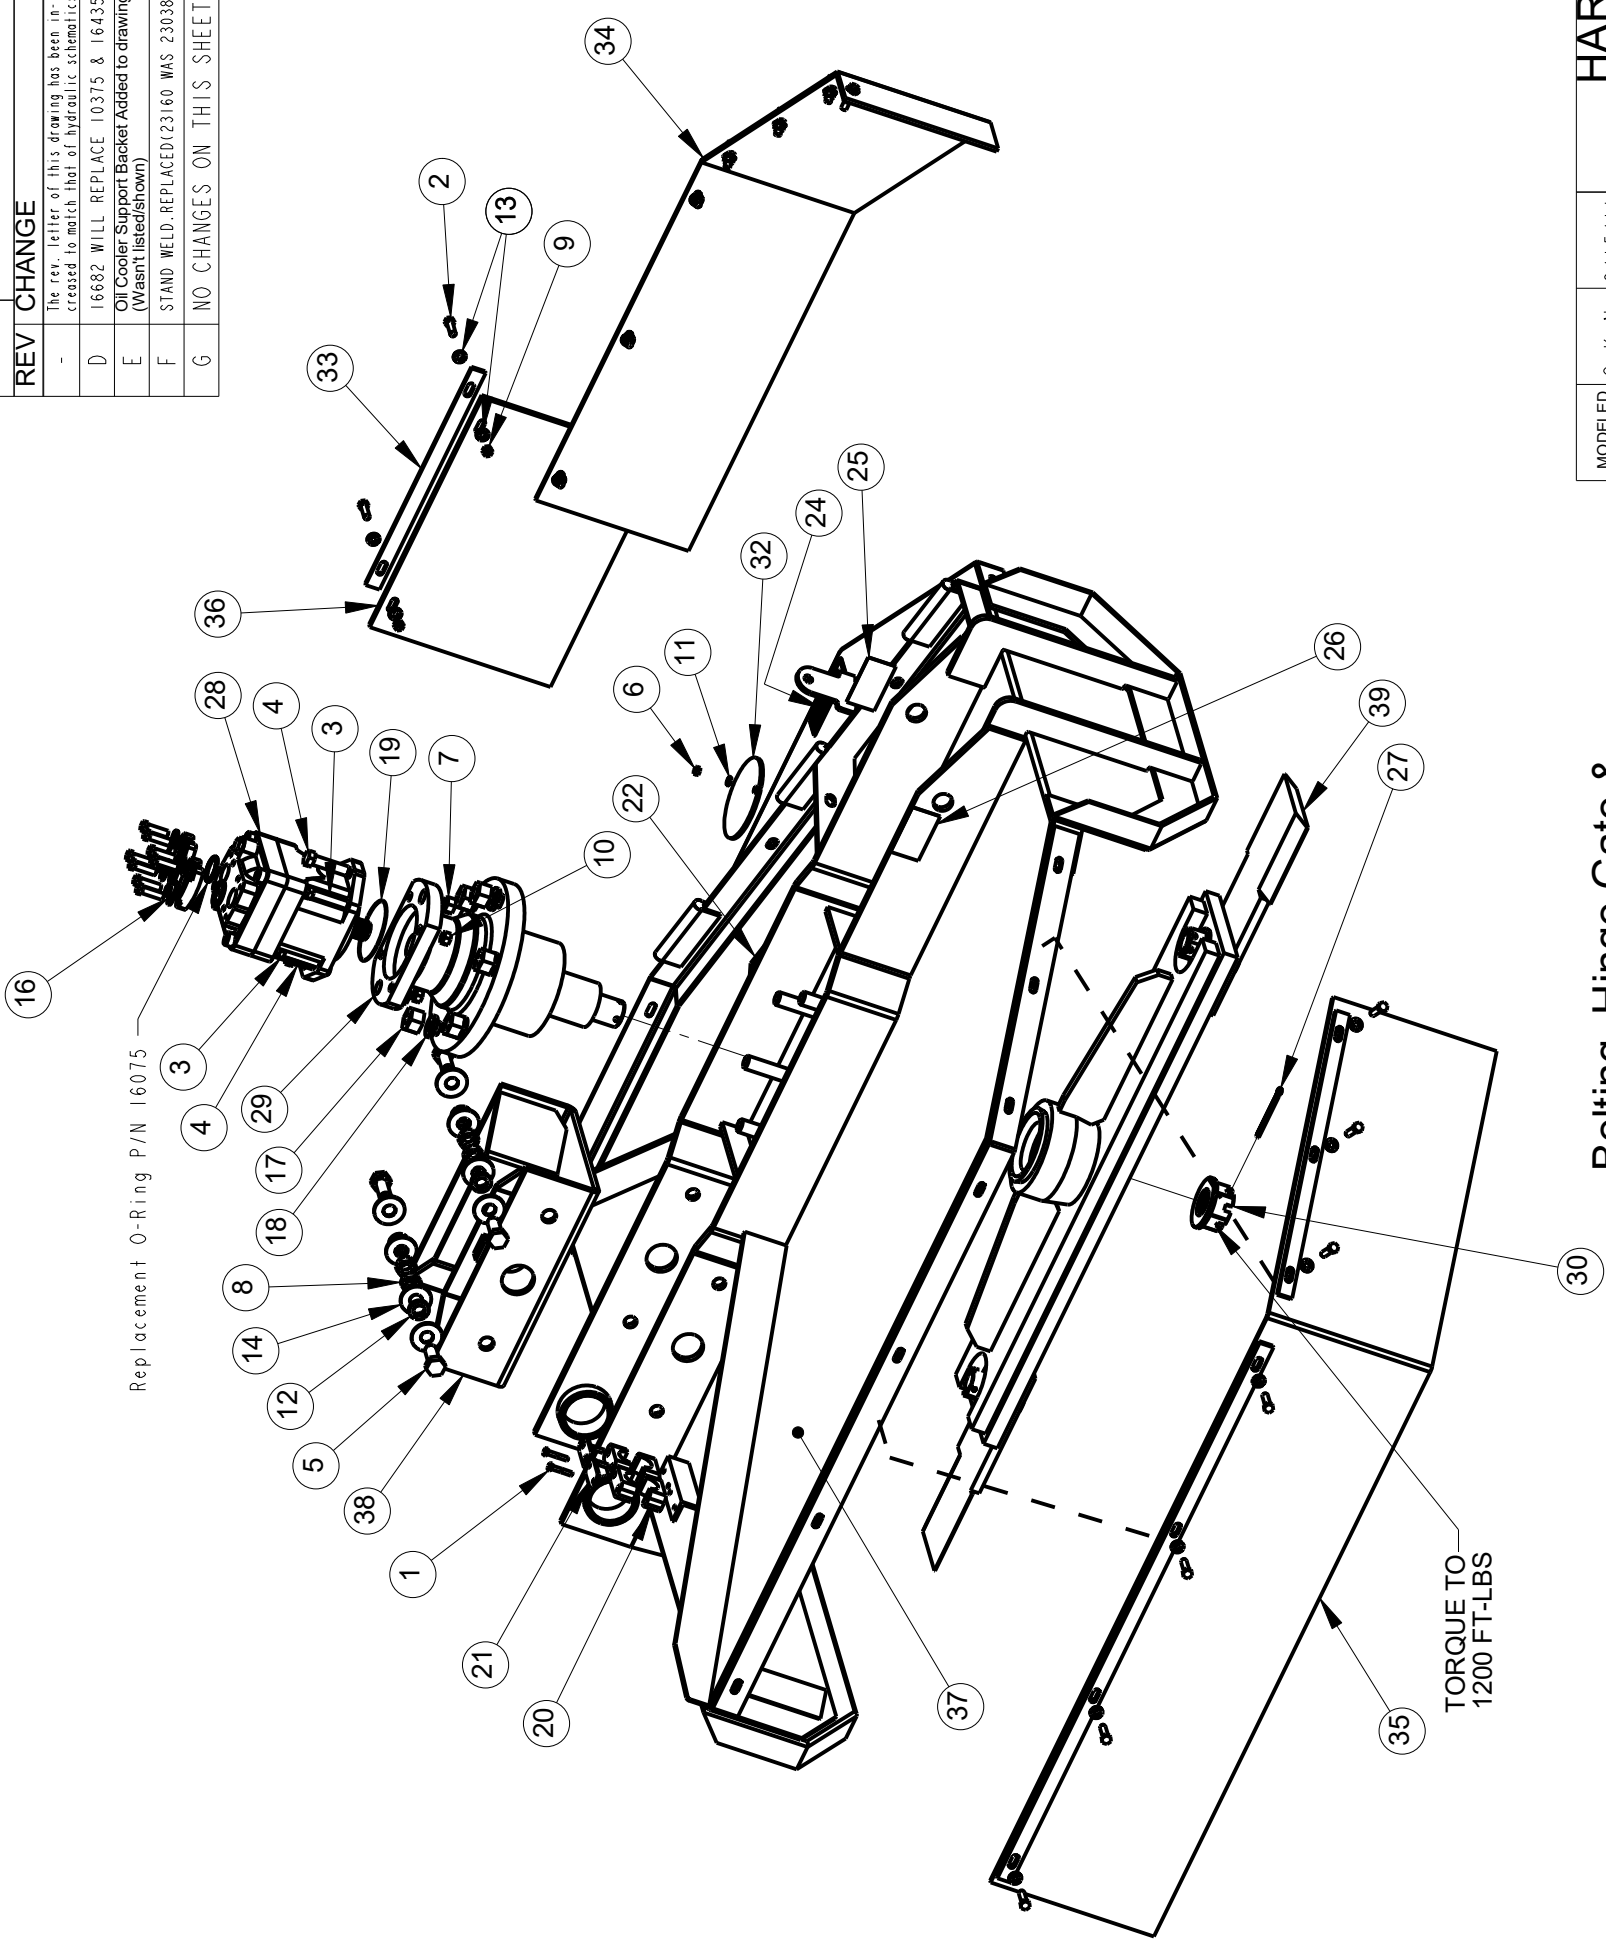

TORQUE TO
1200 FT-LBS

DWG. NO.	REV. CHANGE	BY	DATE	ECN
26750				G
-	The rev. letter of this drawing has been increased to match that of hydraulic schematics.	T. B. B.	10/20/14	---
D	16682 WILL REPLACE 10375 & 16435	T. B. B.	10/20/14	1578
E	Oil Cooler Support Bracket Added to drawing (Wasn't listed/shown)	T. B. B.	12/31/14	1591
F	STAND WELD. REPLACED(23160 WAS 23038)	T. B. B.	1/15/16	1620
G	NO CHANGES ON THIS SHEET.	M. J. Z.	9/27/21	1797


Belting, Hinge Gate & Motor, Blade Holder

All Dimensions in Inches Unless Otherwise Specified
 Dimensions in [] are in Millimeters
 Tolerance Unless Otherwise Specified
 Fractional Dimensions: 1/16"
 Decimal Dim. to Limits Shown
 Angular Dimensions: 1°
 All Holes to be +0-.1/32"

MODELED BY C. K. N.	3/15/11	HARDEE BY EVH MFG. CO. LORIS S.C.
CHECKED BY K. H. N.	3/15/11	
MATERIAL	R.M.N. N/A	DESCRIPTION
Manufactured By: EVH Mfg. Co., LLC		CM2160 BOOM MOWER, COMPLETE
DO NOT SCALE	B	DWG. NO. 26750
		DWG. SIZE
		SHEET 3 of 9

Item	Part Number	Qty.	Description
1	10003	8	HEX BOLT, 1/4" X 1-1/2" Gr. 5 PLATED
2	10018	2	Hex Bolt 5/16" X 1 1/2" gr 5 Plated
3	10207	10	FLATWASHER, 1" PLATED
4	11032	1	DECAL, SMALL-HARDEE LOGO
5	11505	1	8-M-ORB X 8-M-JIC 90 DEG ELBOW
6	15293	2	COVER PLATE - 1"min. Group 2
7	16138	2	LOCKNUT, 7/16"-14 NC with Nylon Insert
8	16174	2	HEX LOCKNUT, NYLON INSERT, 1-1/2"-8NC
9	16349	1	HYD CYLINDER 3"X18", CM2160 DECK
10	16406	4	1/2" Special Hose Clamp CUSHION (SET OF 2)
11	16409	8	1" Special Hose Clamp CUSHION (SET OF 2)
12	16410	4	COVER PLATE
13	16414	1	LOCKNUT, 7/8"-9 Thrd
14	16415	1	FLATWASHER, 7/8" Screw Size, 1-3/4" OD
15	16417	1	HEX NUT, 3/4"-10 Thrd, 1-1/16" W, 7/8" H
16	16418	1	FLATWASHER - 3/4" Screw Size, 1-15/32" OD
17	16419	3	HEX BOLT-HR2160 T" X 1 1/4" LG.
18	16420	4	Thin Hex Nut 1"-8 Thread, 1-1/2" W, 35/64" HL
19	16421	4	HEX LOCKNUT, 1"-8 Gr.8 Nylon-Insert
20	16422	1	HEX BOLT-HR2160 T" X 8" LG.
21	16433	1	90 Deg. Fitting w/ .062 Restriction (Black)
22	23130	1	PIVOT SLEEVE
23	23131	1	END CAP WELDMENT
24	23345	1	HEAD MOUNTING BRACKET WELDMENT
25	25686	2	STAND TUBE WELDMENT, HR2380
26	26751	1	ASSEMBLY - HITCH FRAME - CM2160
27	26754	1	2ND STAGE BOOM WELDMENT
28	26760	1	WELDMENT-LINKAGE-BOOM W/STOPS- CM2160
29	26761	1	PLATE- CYL. MOUNT
30	26762	1	BOOM TO DECK BRACKET WELDMENT
31	26764	1	BOOM TO DECK BRACKET WELDMENT
32	26788	1	Spacer (1" SCH 40 PIPE X 2-3/8")
33	26799	1	Spacer (1" SCH 40 PIPE X 1-3/8")
34	26845	1	PIN, 2nd STAGE CYL.- ROD END
35	26848	1	WELDMENT, PIN - DECK CYL.- ROD END

2nd Stage Boom

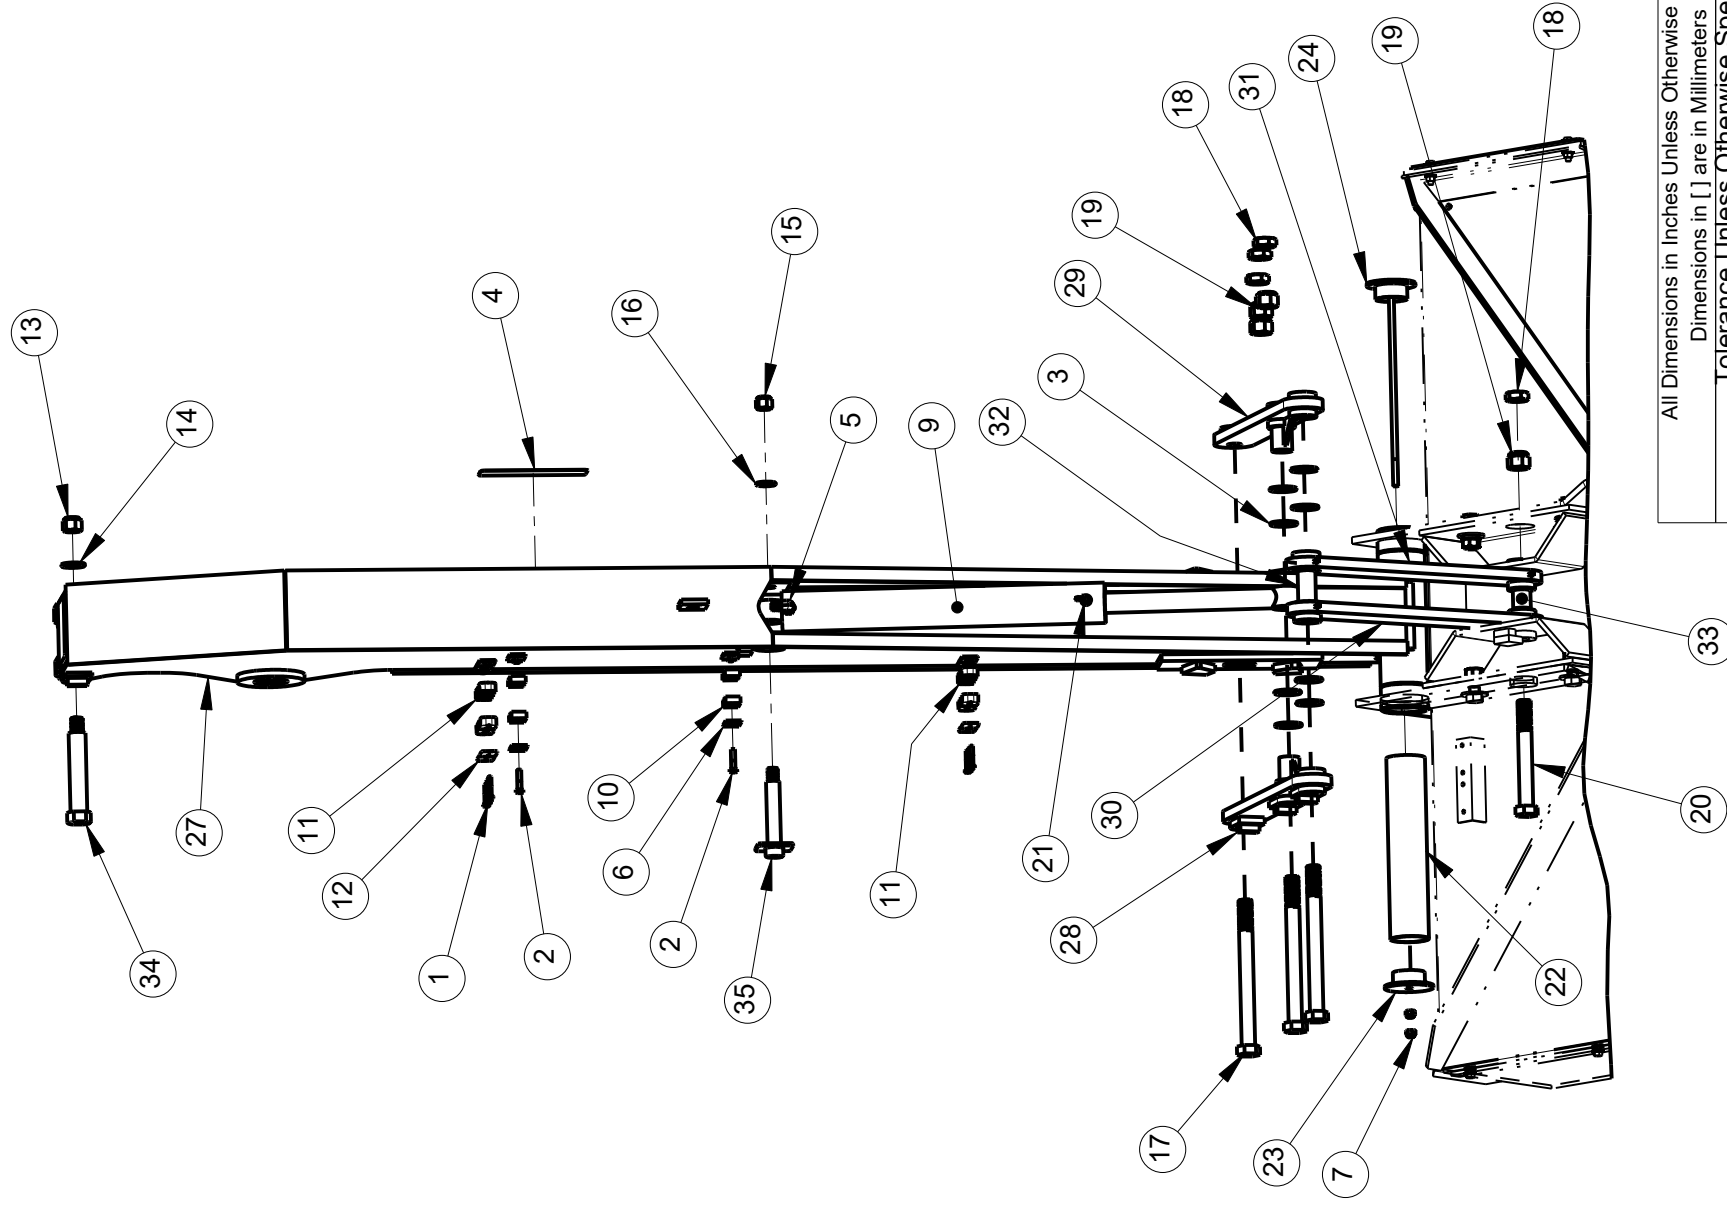


All Dimensions in Inches Unless Otherwise Specified
 Dimensions in [] are in Millimeters
 Tolerance Unless Otherwise Specified
 Fractional Dimensions: 1/16"
 Decimal Dim. to Limits Shown
 Angular Dimensions: 1°
 All Holes to be +0 -1/32"

DWG. NO.	26750	REV.	G
REV	CHANGE	BY	DATE
-	The rev. letter of this drawing has been increased to match that of hydraulic schematics.	T.B.B.	10/20/14
D	16682 WILL REPLACE 10375 & 16435 (Wasnt listed/shown)	T.B.B.	10/20/14
E	Oil Cooler Support Bracket Added to drawing	T.B.B.	12/31/14
F	STAND WELD REPLACED(23160 WAS 23038)	T.B.B.	1/15/16
G	NO CHANGES ON THIS SHEET.	M.J.Z.	9/27/21

MODELED BY	C. K. N.	3/15/11	DESCRIPTION	HARDEE BY EVH MFG. CO. LORIS S.C.
CHECKED BY	K. H. N.	3/15/11	R.M.N.	SHEET 4 of 9
MATERIAL	N/A		CM2160 BOOM MOWER, COMPLETE	
Manufactured By:	EVH Mfg. Co., LLC		DO NOT SCALE	
			DWG. NO. 26750	

Item	Part Number	Qty.	Description
1	10003	8	HEX BOLT, 1/4" X 1-1/2" Gr. 5 PLATED
2	10018	5	Hex Bolt 5/16" X 1 1/2" Gr.5 Plated
3	10034	1	HEX BOLT, 3/8" x 2-1/2" Gr.5 PLATED
4	10175	1	LOCKNUT, 3/8"-16 Gr.5 PLATED
5	10202	1	FLATWASHER, 3/8" PLATED
6	10252	1	COTTER PIN, 3/16" X 2" PLATED
7	10335	1	HARDEE RED PAINT - (NOT SHOWN)
8	11505	1	8-M-ORB X 8-M-JIC 90 DEG ELBOW
9	11860	10	TIE STRAP, (14" LG.) (100/PK)
10	13981	1	8-M-ORB X 8-M-JIC Straight
11	15293	5	COVER PLATE - Twin, Group 2
12	16082	1	Swivel Nut Elbow - 1/2" 90 Deg.
13	16174	2	HEX LOCKNUT, NYLON INSERT, 1-1/2"-6NC
14	16179	2	SPRING LOCKWASHER, 1-1/2"
15	16273	1	HEX LOCKNUT, NYLON INSERT, 1-1/4"
16	16346	1	HYD CYL., 4 X 24"-Welded
17	16347	1	HYD CYLINDER, Custom, 4 x 24"
18	16391	3	CLAMP, STAINLESS STEEL, 3"-5"
19	16406	10	1/2" Special Hose Clamp CUSHION (SET OF 2)
20	16409	8	1" Special Hose Clamp CUSHION (SET OF 2)
21	16410	4	COVER PLATE
22	16414	2	LOCKNUT, 7/8"-9 Thrd
23	16415	2	FLATWASHER, 7/8" Screw Size, 1-3/4" OD
24	16424	2	BOLT-HR2160 1-1/2" X 12-1/2" LG.
25	16433	2	90 Deg. Fitting w/ .062 Restriction (Black)
26	25724	1	CYLINDER PIN WELDMENT
27	26753	1	WELDMENT - 1ST STAGE - CM2160
28	26756	1	BREAK-AWAY WELDMENT W/ ROD TUBE
29	26843	1	PIN, FIRST STAGE
30	26846	2	WELDMENT- 2nd STAGE CYL.- ROD END
31	26850	1	BOLT- BREAK-AWAY

1st Stage Boom

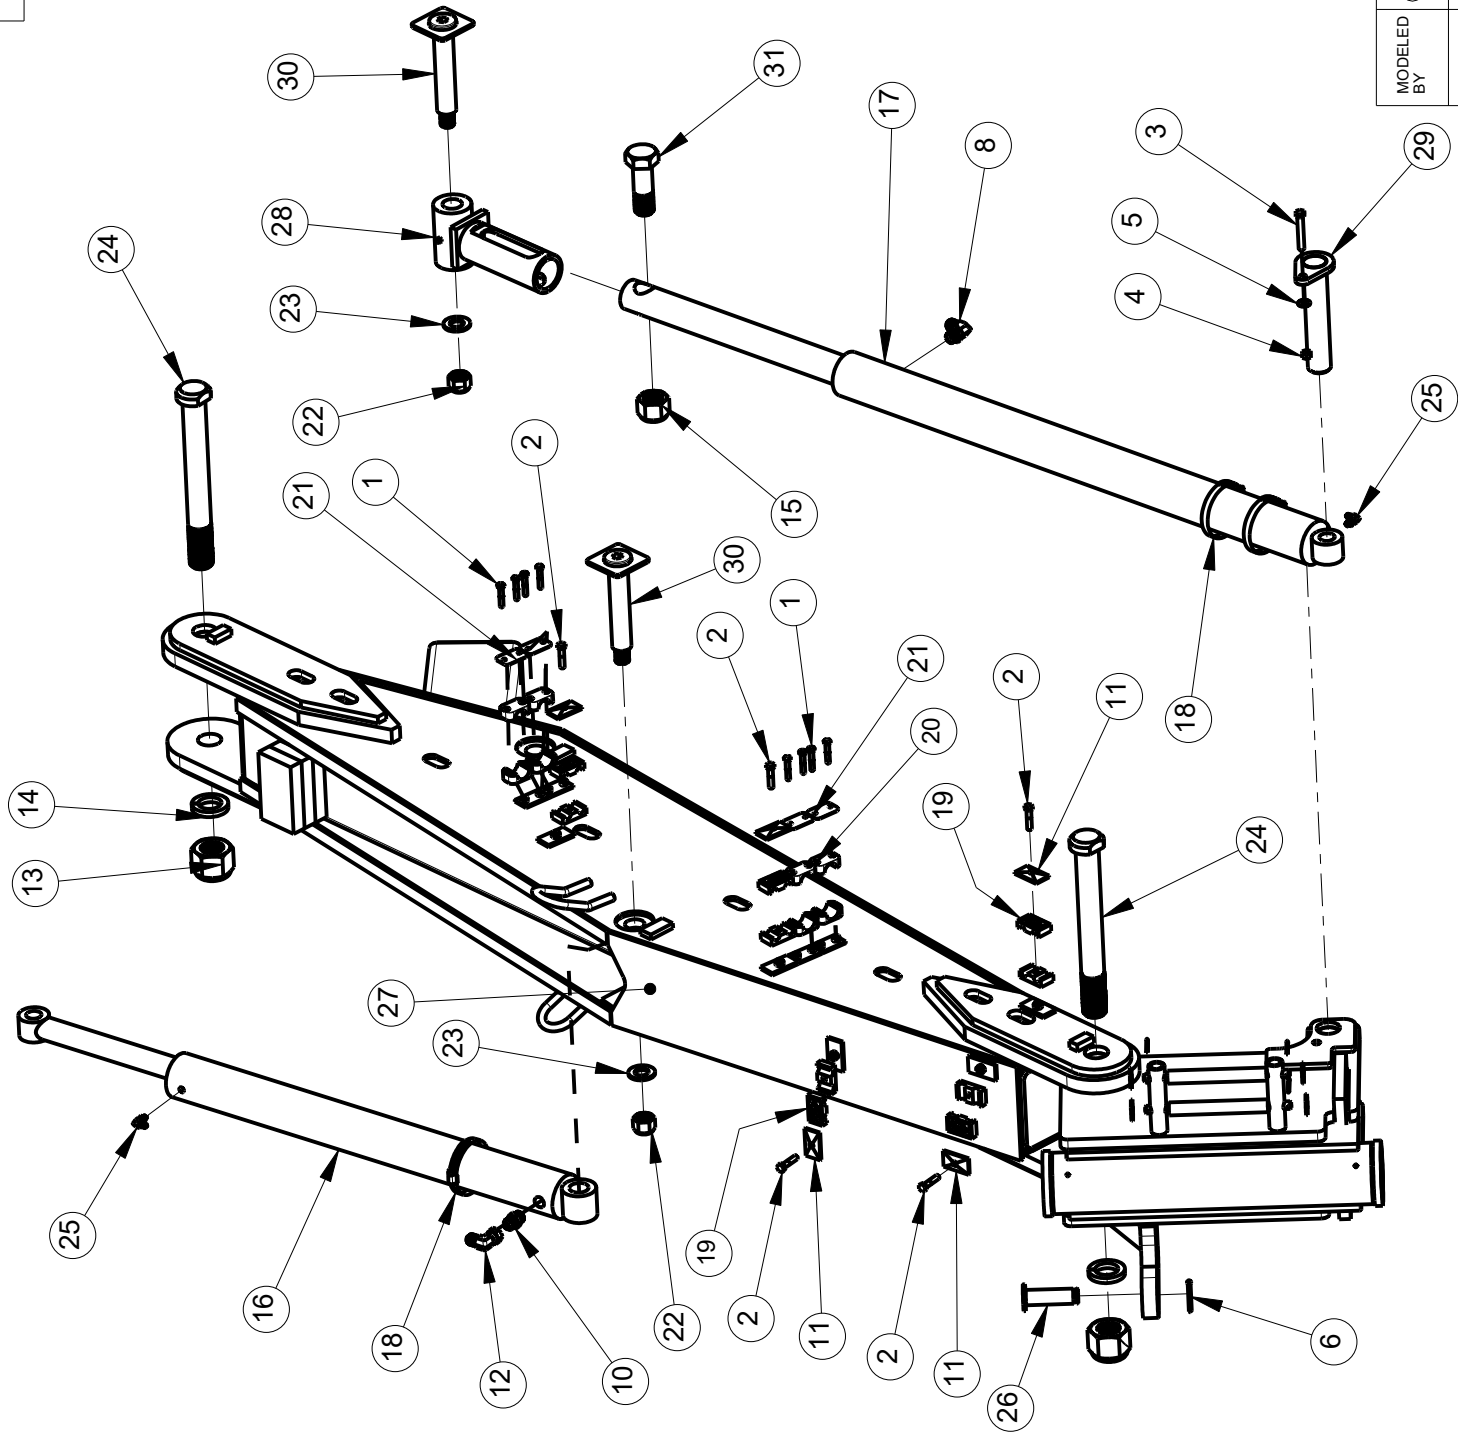


DWG. NO.	26750	REV.	G
REV. CHANGE	BY	DATE	ECN
-	T. B. B.	10/20/14	---
The rev. letter of this drawing has been increased to match that of hydraulic schematics.			
D	T. B. B.	10/20/14	1578
16682 WILL REPLACE 10375 & 16435			
E	T. B. B.	12/31/14	1591
Oil Cooler Support Bracket Added to drawing (Wasn't listed/shown)			
F	T. B. B.	1/15/16	1620
STAND WELD. REPLACED(23160 WAS 23038)			
G	M. J. Z.	9/27/21	1797
NO CHANGES ON THIS SHEET.			

MODELED BY	C. K. N.	3/15/11	HARDEE BY EVH MFG. CO. LORIS S.C.
CHECKED BY	K. H. N.	3/15/11	
MATERIAL	R.M.N. N/A		DESCRIPTION
Manufactured By: EVH Mfg. Co., LLC			CM2160 BOOM MOWER, COMPLETE
DO NOT SCALE			B DWG. NO. 26750
DWG. SIZE			DWG. NO.

All Dimensions in Inches Unless Otherwise Specified
 Dimensions in [] are in Millimeters
 Tolerance Unless Otherwise Specified
 Fractional Dimensions: 1/16"
 Decimal Dim. to Limits Shown
 Angular Dimensions: 1°
 All Holes to be +0 -1/32"

Item	Qty.	Description	Part Number	Qty.	Description
1	10031	2	HEX BOLT, 3/8-16 X 1 GR. 5 PLATED	1	HEX BOLT, 5/8" X 1-1/2" GR. 5 PLATED
2	10162	2	HEX NUT, 3/8" (Gr.5 PLATED)	2	FLAT WASHER, 1/2" PLATED, USS
3	10182	2	LOCK WASHER, 3/8 PLATED	1	FLAT WASHER (1-1/2") USS Plain Zinc
4	10252	2	COTTER PIN, 3/16" X 2" PLATED	4	COTTER PIN (1/8" X 1-1/4" PLATED)
5	10339	2	POP RIVET	1	LOCKNUT, 1-1/2"-12 Zinc Plated Nylon Insert Lam
6	10390	4	CLIP PIN (1/8 x 2)	2	HOSE BRACKET ROLLER
7	10393	2	UNIVERSAL CLIP PIN	2	ROD, HOSE BRACKET
8	11505	1	8-M-ORB X 8-M-JIC 90 DEG ELBOW	1	WELDMENT, Swiing arm shaft, LRS0160/LR40160
9	15466	1	TUBING INSERT, 3-1/2" SQUARE	1	WELDMENT, Hitch Frame
10	15899	2	Tubing Insert, 4" Sqr. X 11	2	WELDMENT, SWIVEL - CM2160
11	16041	2	PIN, BENT, (1/2" Dia. X 8" LG.)	2	WELD IN BUSHING, w GREASE FITTING
12	16345	1	HYD. CYL., 3 X 18" WELDED, CM2160 SWING	2	WELD IN BUSHING, 4-1/4" OD x 7/8" LG.
13	16432	1	90 DEG 1/2" M-JIC/M-ORB (PAINTED RED)		
14	16568	2	BOTTOM HITCH PIN FOR HYD. CAT 3		
15	16957	1	MOUNTING COLLAR, ACCUMULATOR		
16	16988	2	Lynch Pin (Cat.3)		
17	23160	2	STAND WELDMENT, 17-7/8" Tall		
18	25629	1	BRACE SUPPORT 3-1/2" X 3-1/2" X 66" LG.		
19	25686	2	STAND TUBE WELDMENT, HR2360		
20	25724	2	CYLINDER PIN WELDMENT		
21	26751	1	ASSEMBLY - HITCH FRAME - CM2160		

DWG. NO.	REV. CHANGE	BY	DATE	ECN
26750				G
-	The rev. letter of this drawing has been increased to match that of hydraulic schematics	T. B. B.	10/20/14	---
D	16682 WILL REPLACE 10375 & 16435	T. B. B.	10/20/14	1578
E	Oil Cooler Support Bracket Added to drawing (Wasn't listed/shown)	T. B. B.	12/31/14	1591
F	STAND WELD. REPLACED(23160 WAS 23038)	T. B. B.	1/15/16	1620
G	ACCUMULATOR SUPPORT/BRKT. /HARDWARE CHANGED	M. J. Z.	9/27/21	1797

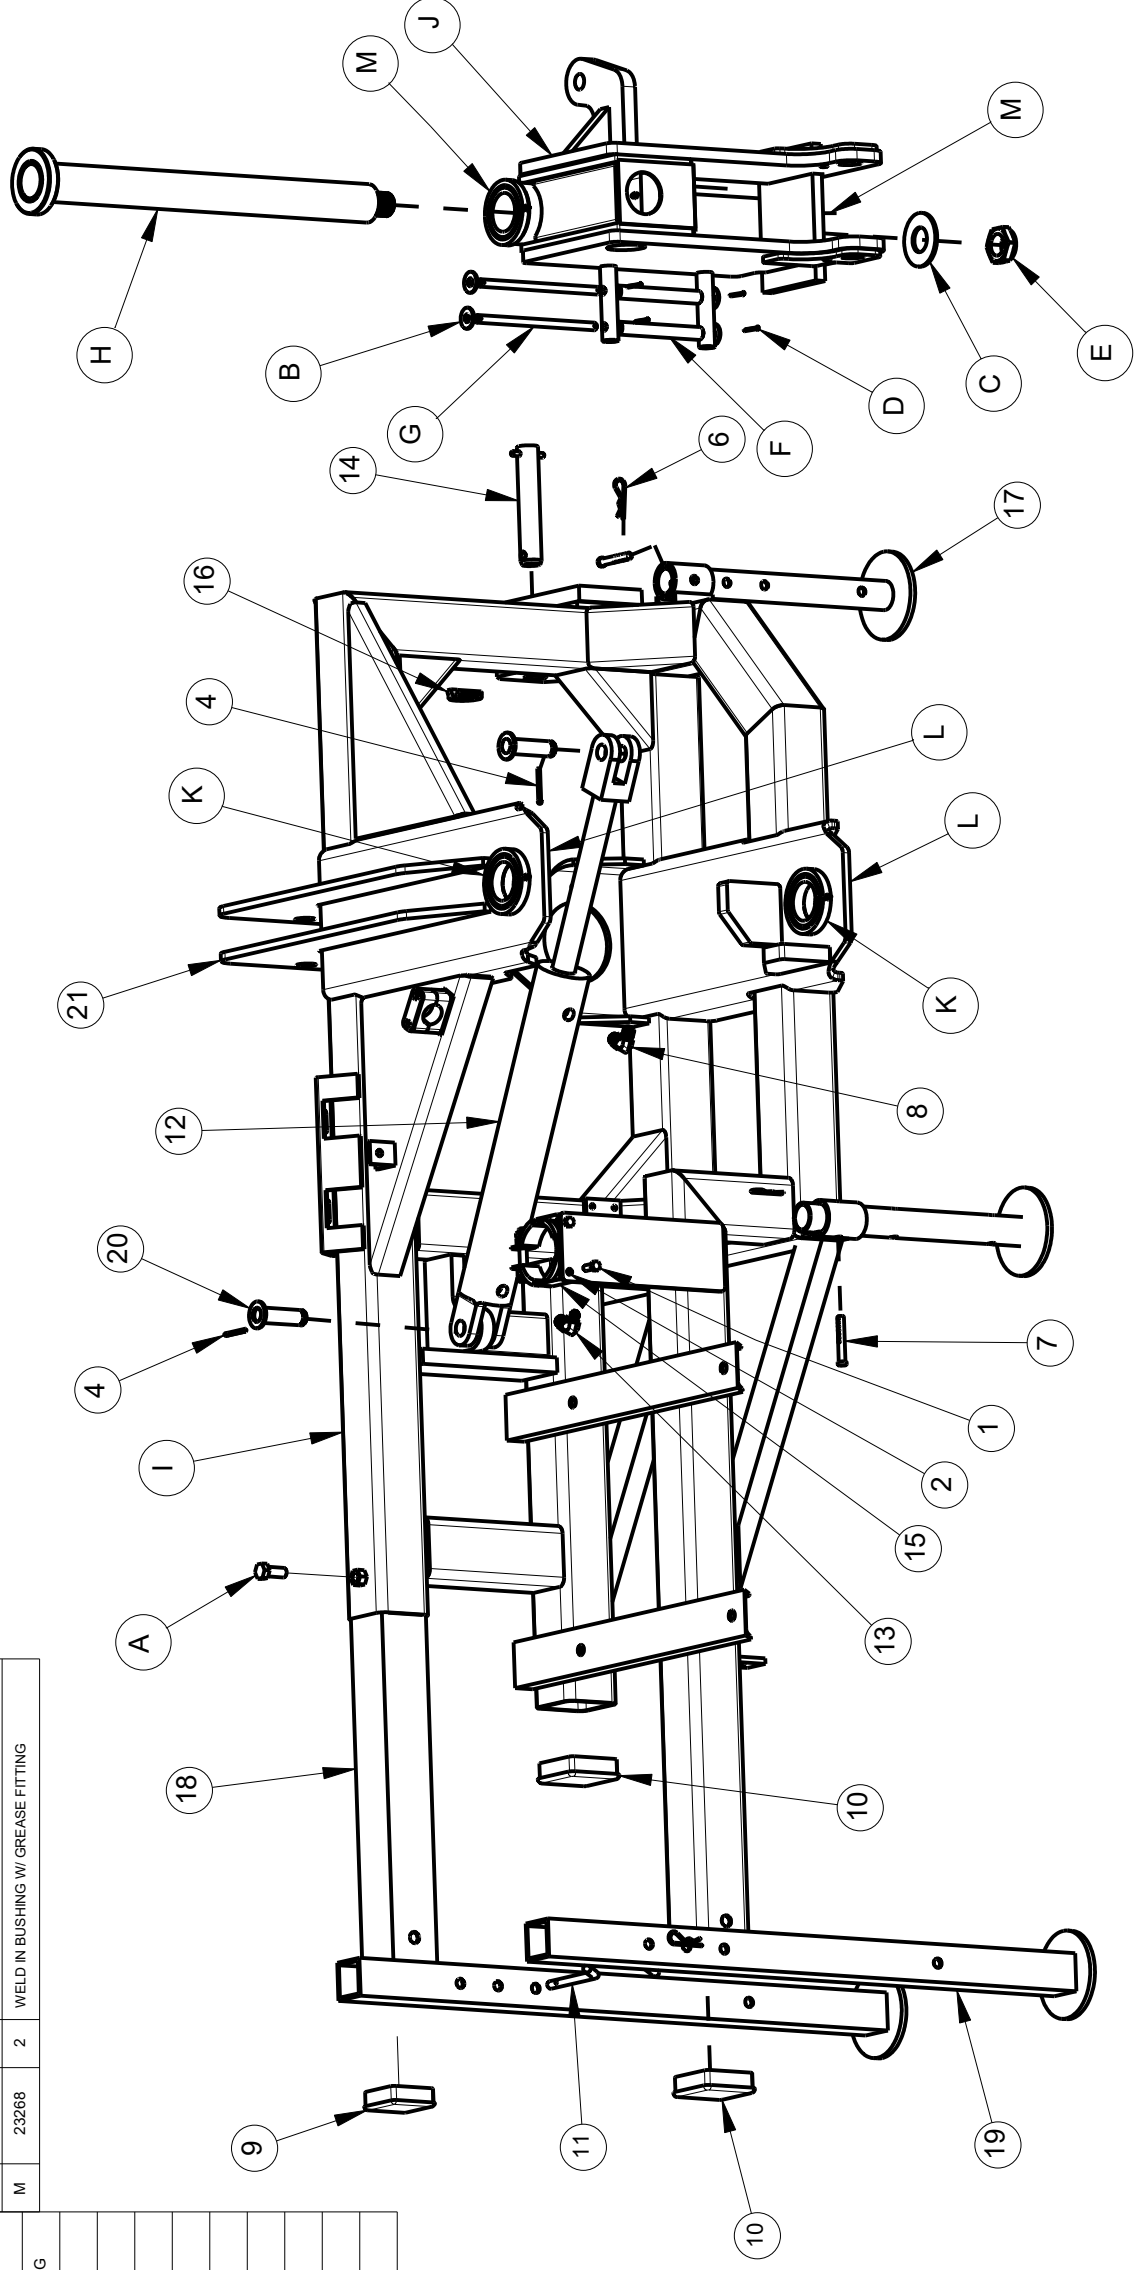


Hitch Frame & Swivel

MODELED BY	C. K. N.	3/15/11	HARDEE BY	
CHECKED BY	K. H. N.	3/15/11	EVH MFG. CO.	
MATERIAL			DESCRIPTION	SHEET 6 of 9
R.M.N.			CM2160 BOOM MOWER, COMPLETE	
N/A			DO NOT SCALE	DWG. NO. 26750
Manufactured By:			EVH Mfg. Co., LLC	

All Dimensions in Inches Unless Otherwise Specified
 Dimensions in [] are in Millimeters
 Tolerance Unless Otherwise Specified
 Fractional Dimensions: 1/16"
 Decimal Dim. to Limits Shown
 Angular Dimensions: 1°
 All Holes to be +0. -1/32"

Item	Part Number	Qty.	Description
1	10002	2	HEX BOLT, 1/4-20 X 1 Gr.5 PLATED
2	10032	5	HEX BOLT, 3/8 x 1-1/2 Gr.5 PLATED
3	10071	4	HEX BOLT, 1/2" X 1" Gr.5 PLATED
4	10092	2	HEX BOLT, 5/8" X 2" Gr.5 PLATED
5	10166	2	LOCKNUT, 5/8"-11 PLATED
6	10175	5	LOCKNUT, 3/8"-16 Gr.5 PLATED
7	10185	2	LOCKWASHER, 5/8" PLATED
8	10200	2	FLATWASHER, 1/4" PLATED
9	10202	10	FLATWASHER, 3/8" PLATED
10	10335	1	HARDEE RED PAINT - (NOT SHOWN)
11	10336	1	GEAR OIL (85W-140) - (NOT SHOWN)
12	10368	1	GATE VALVE, 1-1/4"
13	10373	1	HYDRAULIC OIL
14	10387	1	O-RING, 1/8"
15	10501	1	FLOW EZY BREATHER
16	10646	1	GREASE
17	11005	1	DECAL, WARNING - Thrown Objects
18	11010	3	LARGE HARDEE LOGO DECAL
19	11675	1	FILTER ASSEMBLY, RETURN
20	11775	1	HYDRAULIC PUMP, 540RPM
21	11850	1	DECAL, WEB SITE
22	11860	10	TIE STRAP, (14" LG.) (100)PK
23	13535	4	STAIN. STEEL CLAMP, 1-1/2" TO 1-3/4"
24	13563	1	1-1/4"-M-NPT X 1-1/2" Metal Hose Barb
25	13632	1	METAL CAP, 1/4" NPT
26	13697	1	1-1/4" NPT Female Threaded Elbow
27	13758	1	20-M-NPT X 16-F-NPT Reducer
28	13778	1	NIPPLE, 1-1/4" NPT X 3-1/2" Long
29	13974	1	16-M-JIC X 16-M-NPT 90 Deg. Elbow
30	13981	1	8-M-ORB X 8-M-JIC Straight
31	15251	2	1" HOSE CLAMP HALF
32	15255	1	COVER PLATE, HOSE CLAMP
33	15256	4	HEX BOLT, 1/4" X 2-3/8" Gr.5 PLATED
34	15461	1	CAP 37 Deg. Flare #8 (1/2")
35	15466	1	TUBING INSERT, 3-1/2" SQUARE
36	15845-15	1	DANGER DECAL (KIT 15845)
37	15845-16	1	DANGER DECAL (KIT 15845)
38	15845-9	1	WARNING DECAL (KIT 15845)
39	15852	1	RED REFLECTOR DECAL
40	15853	1	YELLOW REFLECTOR DECAL
41	15854	1	MANUAL HOLDER CANISTER
42	15860	2	U-NUT, 1/4"-20 UNC
43	15899	2	Tubing Insert, 4" Sqr. X 11
44	16042	1	SIGHT GAUGE, 10"
45	16075	1	O-RING, 1-1/4" SAE
46	16077	1	STRAIGHT FITTING - 1"
47	16084	3	Swivel Nut Run Tee - 37 Deg. Flare
48	16340	3	Decal, Model Number For CM2160
49	16353	4	ELBOW, 16 M-JIC - 12 MORB
50	16354	1	Fitting, 16-M-ORB/16-F-JIC0
51	16395	1	BULKHEAD 1/2" M-JIC w/LOCKNUT
52	16396	1	CROSS 1/2" M-JIC
53	16397	1	RUN TEE 1/2" M-JIC/ M-ORB/M-JIC
54	16398	1	ADAPTER 1/2" M-ORB/ F-JIC
55	16399	1	Spiral Guard for 1/2" Hose
56	16400	1	DECAL - CM2160 HYD LINE CONNECTIONS
57	16403	1	Relief Valve Assembly @ 1100psi
58	16404	1	CHECK VALVE- INLINE 5 PSI
59	16431	1	WIRING HARN., OIL COOLER (NOT SHOWN)
60	16617	1	OIL COOLER
61	16618	1	TEMPERATURE SWITCH

DWG. NO.	26750	REV.	G
REV. CHANGE	BY	DATE	ECN
-	The rev. letter of this drawing has been increased to match that of hydraulic schematics.	T. B. B.	10/20/14
D	16682 WILL REPLACE 10375 & 16435	T. B. B.	10/20/14
E	Oil Cooler Support Bracket Added to drawing (Wasn't listed/shown)	T. B. B.	12/31/14
F	STAND WELD. REPLACED(23160 was 23038)	T. B. B.	1/15/16
G	26767 (ACCUM.) WAS 26763. M. J. Z.	9/27/21	1797

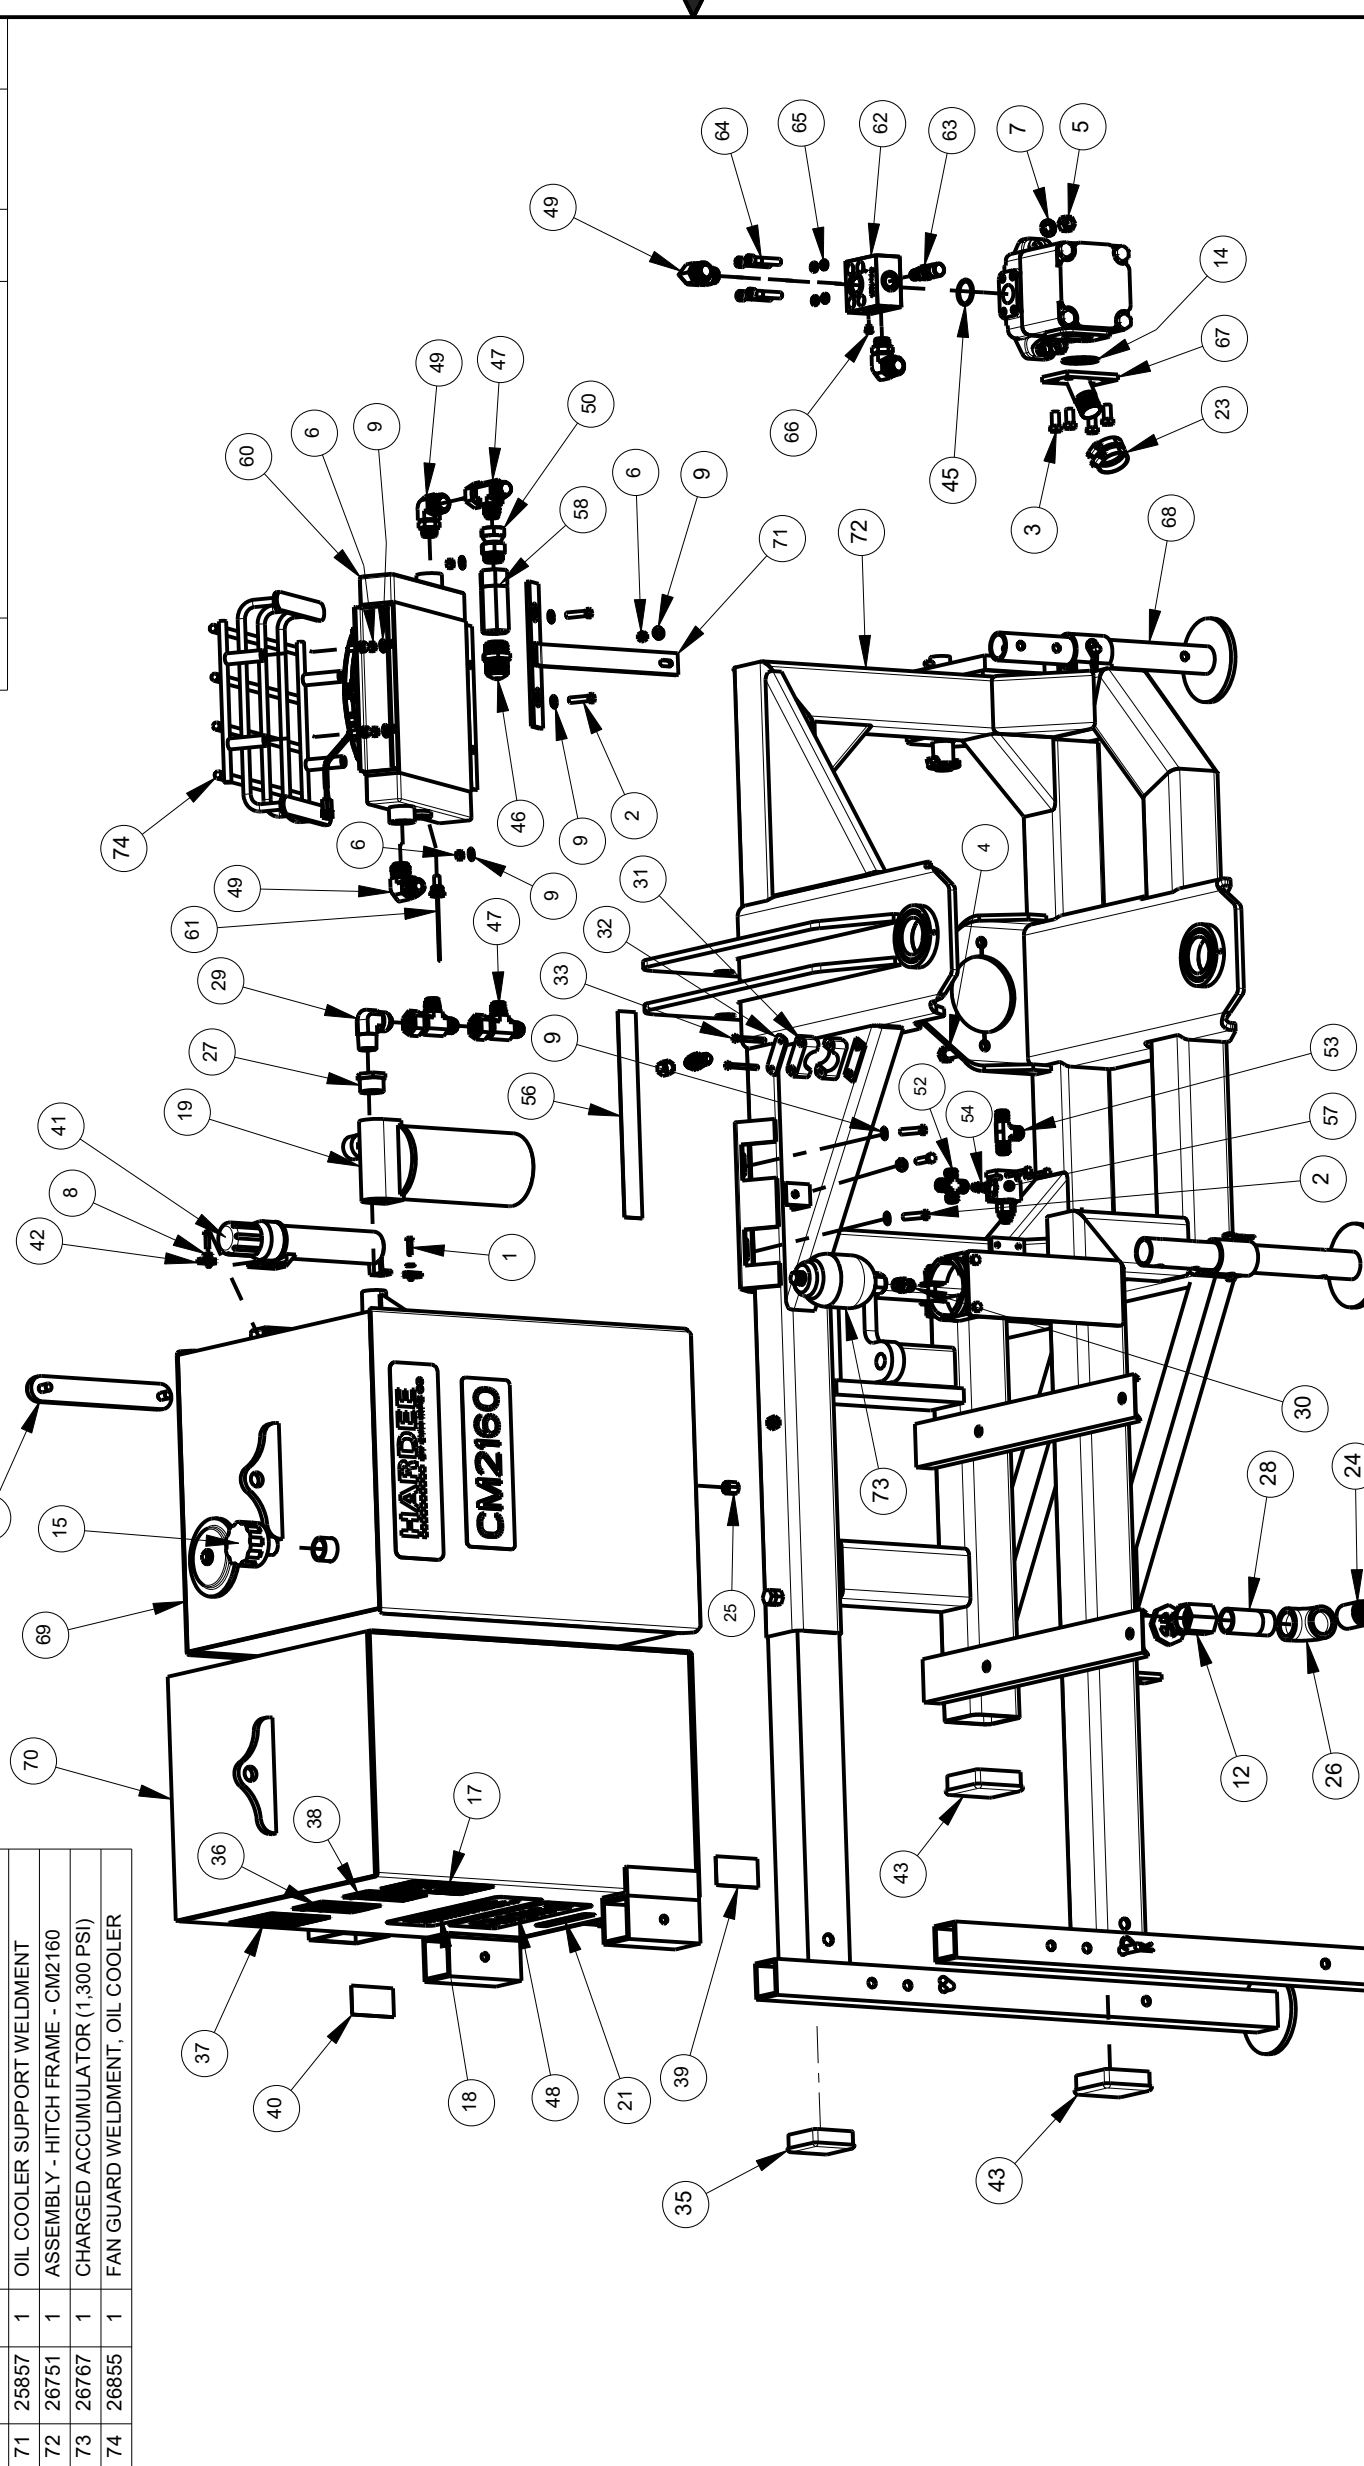

MODELED BY	C. K. N.	3/15/11	DESCRIPTION	SHEET 7 of 9
CHECKED BY	K. H. N.	3/15/11		
MATERIAL	R.M.N.			
		N/A		
Manufactured By:		CM2160 BOOM MOWER, COMPLETE		
EVH Mfg. Co., LLC		DO NOT SCALE	DWG. NO.	26750


Hitch Frame & Components

All Dimensions in Inches Unless Otherwise Specified
 Dimensions in [] are in Millimeters
 Tolerance Unless Otherwise Specified
 Fractional Dimensions: 1/16"
 Decimal Dim. to Limits Shown
 Angular Dimensions: 1°
 All Holes to be +0. -1/32"

62	16682	1	RELIEF VALVE ASM - 2700PSI - Pump Mounted
63	16683	1	Relief Valve 2700PSI - w/TAMPER PROOF CAP
64	16685	4	Screw, 7/16-14 X 2-1/4 long - Zinc Plated
65	16686	4	LOCK WASHER, Zinc Plated 7/16 High Collar
66	16697	1	#4 ORB HOLLOW HEX PLUG
67	22833	1	FLUID CONNECTOR WELDMENT
68	23160	2	STAND WELDMENT, 17-7/8" Tall
69	25670	1	OIL TANK WELDMENT - HR2360
70	25680	1	WEIGHT BOX WELDMENT
71	25857	1	OIL COOLER SUPPORT WELDMENT
72	26751	1	ASSEMBLY - HITCH FRAME - CM2160
73	26767	1	CHARGED ACCUMULATOR (1,300 PSI)
74	26855	1	FAN GUARD WELDMENT, OIL COOLER

DWG. NO.		REV. G	
REV	CHANGE	BY	DATE
B	16617 WAS 16344 / 16618 WAS 16405	C.K.N.	11/21/12 1525
C	16349 WAS 16594 / 16346 WAS 16595	C.K.N.	02/14/13 1527
D	16682 w/111 Replace 10375 & 16435	T.B.B.	10/20/14 1578
E	Oil Cooler Support Bracket Added to drawing (Wasn't listed/shown)	T.B.B.	12/31/14 1591
F	Stand Weld. Replaced (23160 was 23038)	T.B.B.	1/15/16 1620
G	26767 WAS 26763. 2000 PSI WAS 11100	M.J.Z.	9/27/21 1797

CYLINDER HYDRAULICS
TRACTOR CYLINDER SETTINGS
2950 PSI MAX
4 TO 7 GPM FLOW

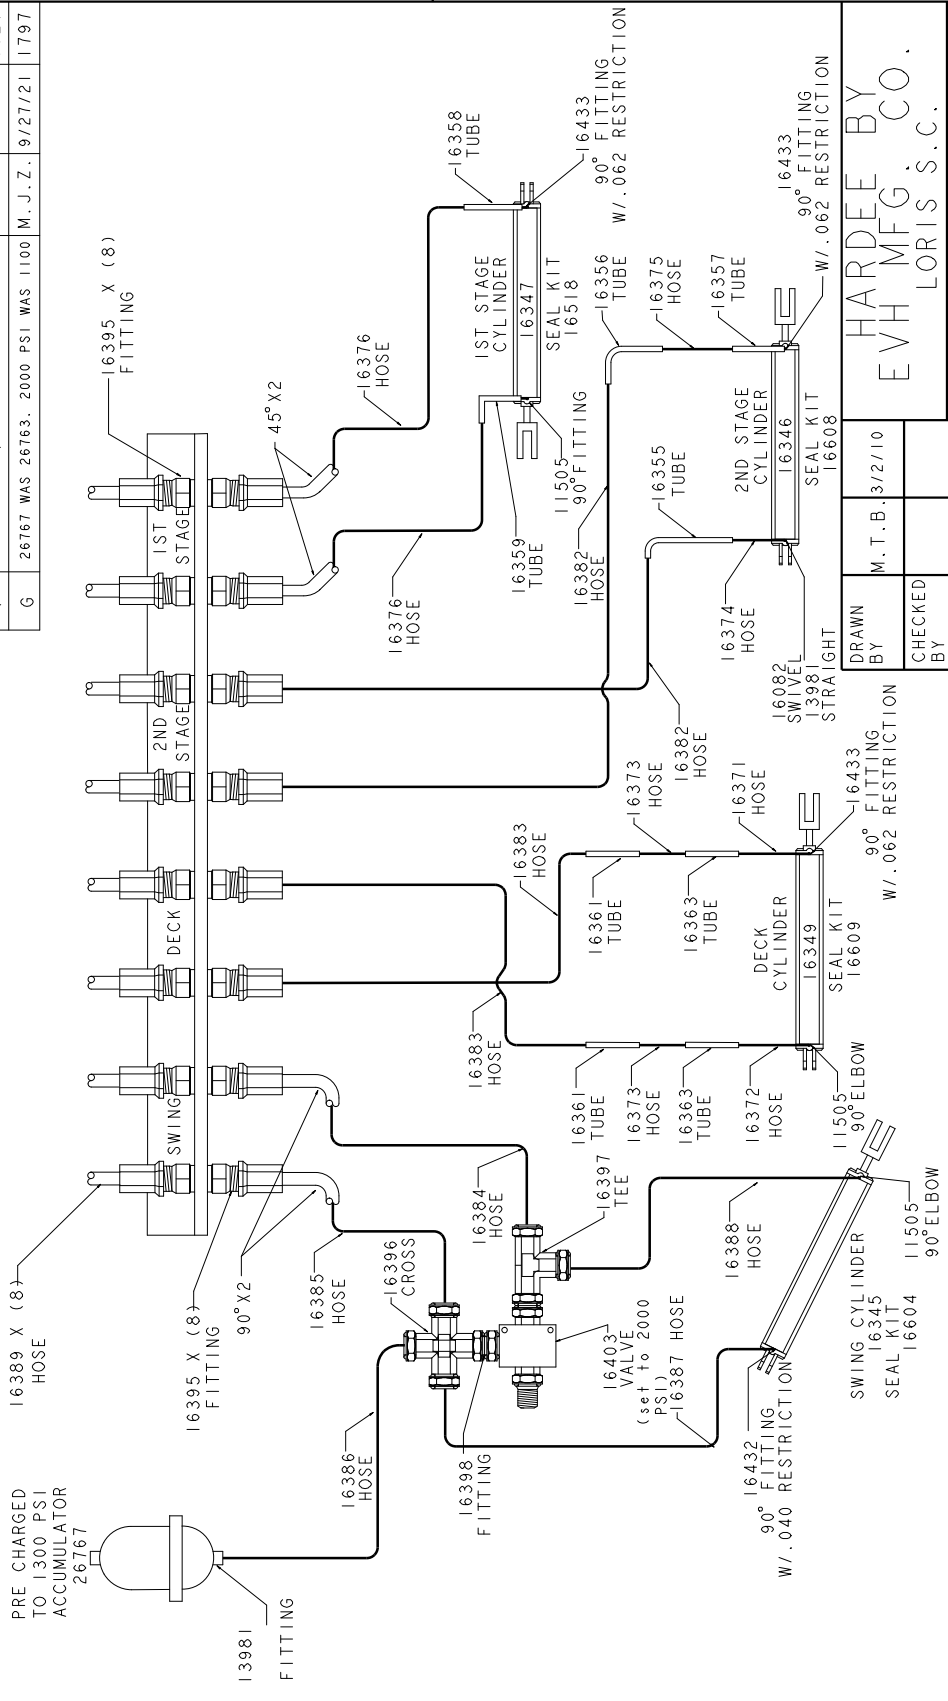

DRAWN BY	M.T.B. 3/2/10	APPLICATION	OLD PART #
CHECKED BY		DESCRIPTION	CM2160
MATERIAL	N/A	DO NOT SCALE	A
R.M.N.	N/A	DESCRIPTION	HYDRAULIC SCHEMATICS FOR CM2160
N/A		SCALE	DWG. NO. 26750
N/A		DWG SIZE SHIT 8 OF 9	

HARDEE BY
EVH MFG. CO.
LORIS S.C.

All Dimensions in Inches Unless Otherwise Specified
 Dimensions in [] are in Millimeters
 Tolerances Unless Otherwise Specified
 Fractional Dimensions ±1/16" Angular Dimensions ±1°
 Decimal Dim. to Limits Shown All holes to be -1/32

DWG. NO.		26750		REV. G	
REV	CHANGE	BY	DATE	ECN	
B	16617 WAS 16344 / 16618 WAS 16405	C.K.N.	11/21/12	1525	
C	16349 WAS 16594 / 16346 WAS 16595	C.K.N.	02/14/13	1527	
D	16682 will Replace 10375 & 16435	T.B.B.	10/20/14	1578	
E	Oil Cooler Support Bracket Added to drawing. (Weld, + listed/shown)	T.B.B.	12/31/14	1591	
F	Stand Weld, Replaced (23160 was 23038)	T.B.B.	11/15/16	1620	
G	NO CHANGES ON THIS SHEET.	M. J.Z.	9/27/21	1797	

BLADE HYDRAULICS

NOT SHOWN
16431- WIRING
HARNES, OIL
COOLER

16617 OIL COOLER W/FAN
16412 REPAACEMENT FAN

TEMP SWITCH
W/CONNECTOR PLUG

RESERVOIR
Sight Gauge 10"
With Thermometer
16042

RESERVOIR COVER
10502
BREATHER
CAP
10501

16353 90° ELBOW
16618
16617 OIL COOLER W/FAN
16412 REPAACEMENT FAN
16084 TEE
16404 CHK VALVE
16077 FITTING
16354 90° ELBOW
16379
16675 KIT
11767 FILTER
10510 GAGE

13758 CONNECTOR
13974 90° ELBOW
16084 TEE
16379 HOSE

16381 HOSE
16685 BOLT
16686 LOCK WASHER
16353 90° ELBOW
10071 BOLT


16365 TUBE
FLANGE SET
W/BOLTS & SEAL
10872 (2)
HOSE 16368
16370 HOSE
16367 TUBE
16369 HOSE
16368 HOSE

16378 HOSE
16353 90° ELBOW
16683 RELIEF VALVE (ONLY)
16682 VALVE BODY
W/RELIEF VALVE
16075 REPLACEMENT O-RING

16379 HOSE
25571 HOSE
13535 CLAMPS X4
22833 CONNECTOR

10358 GATE VALVE
13778 CONNECTOR
13697 90° ELBOW
13563 CONNECTOR

MOTOR 16060
SEAL KIT 15739
A PORT
B PORT

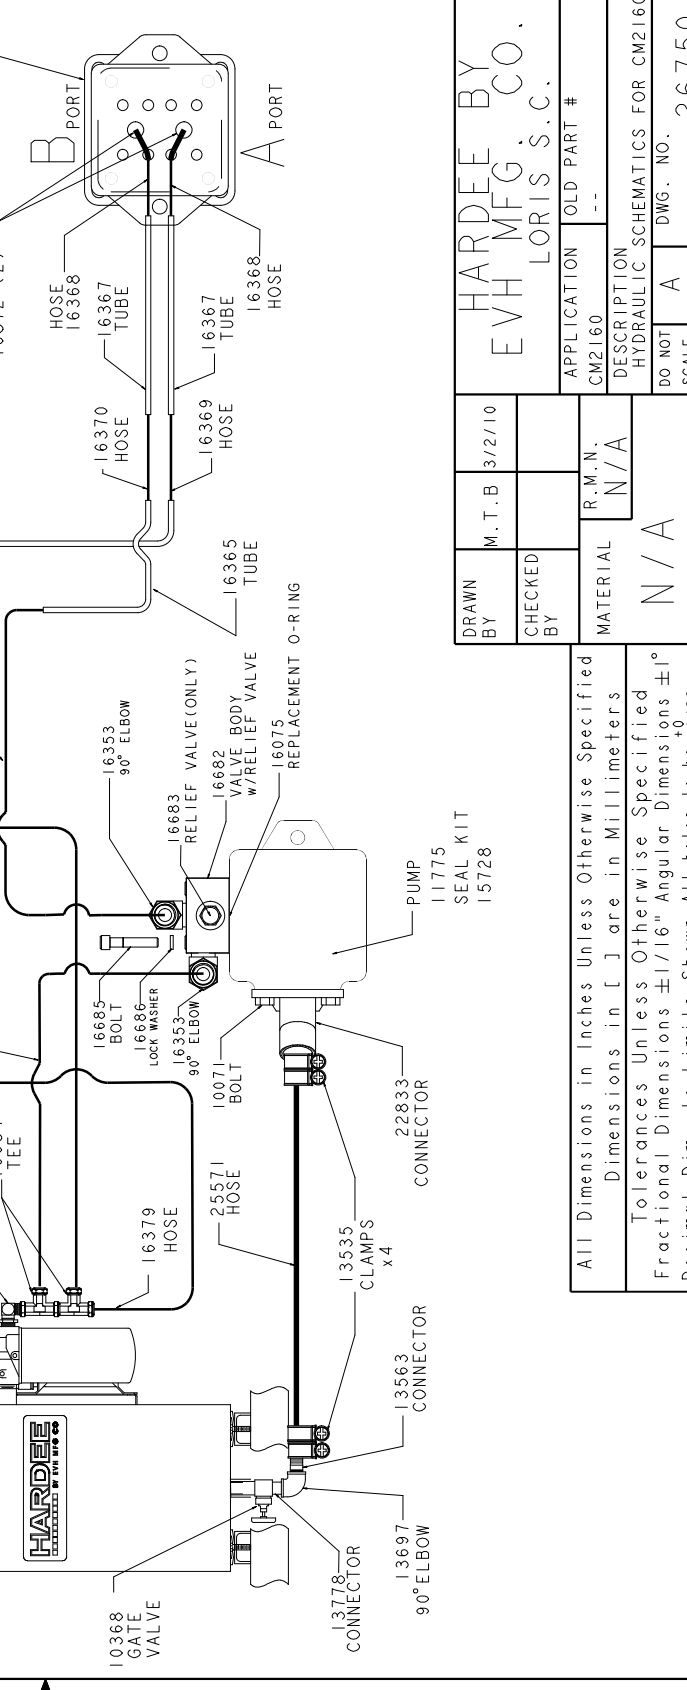


DRAWN BY	M.T.B	3/2/10	HARDEE BY EVH MFG. CO. LORIS S.C.	
CHECKED BY			APPLICATION	OLD PART #
MATERIAL	N/A	R.M.N.	CM2160	--
	N/A	DESCRIPTION	HYDRAULIC SCHEMATICS FOR CM2160	
DO NOT SCALE	DWG. NO.	26750	SHT 9 OF 9	

All Dimensions in Inches Unless Otherwise Specified
Tolerances Unless Otherwise Specified
Fractional Dimensions ±1/16" Angular Dimensions ±1°
Decimal Dim. to Limits Shown All holes to be -.1/32

DWG. NO.	26765		REV.	IR
REV	CHANGE	BY	DATE	ECN
IR	INITIAL RELEASE	C.K.N.	3/31/14	1562

TORQUE TO 800 FT-LBS MINIMUM

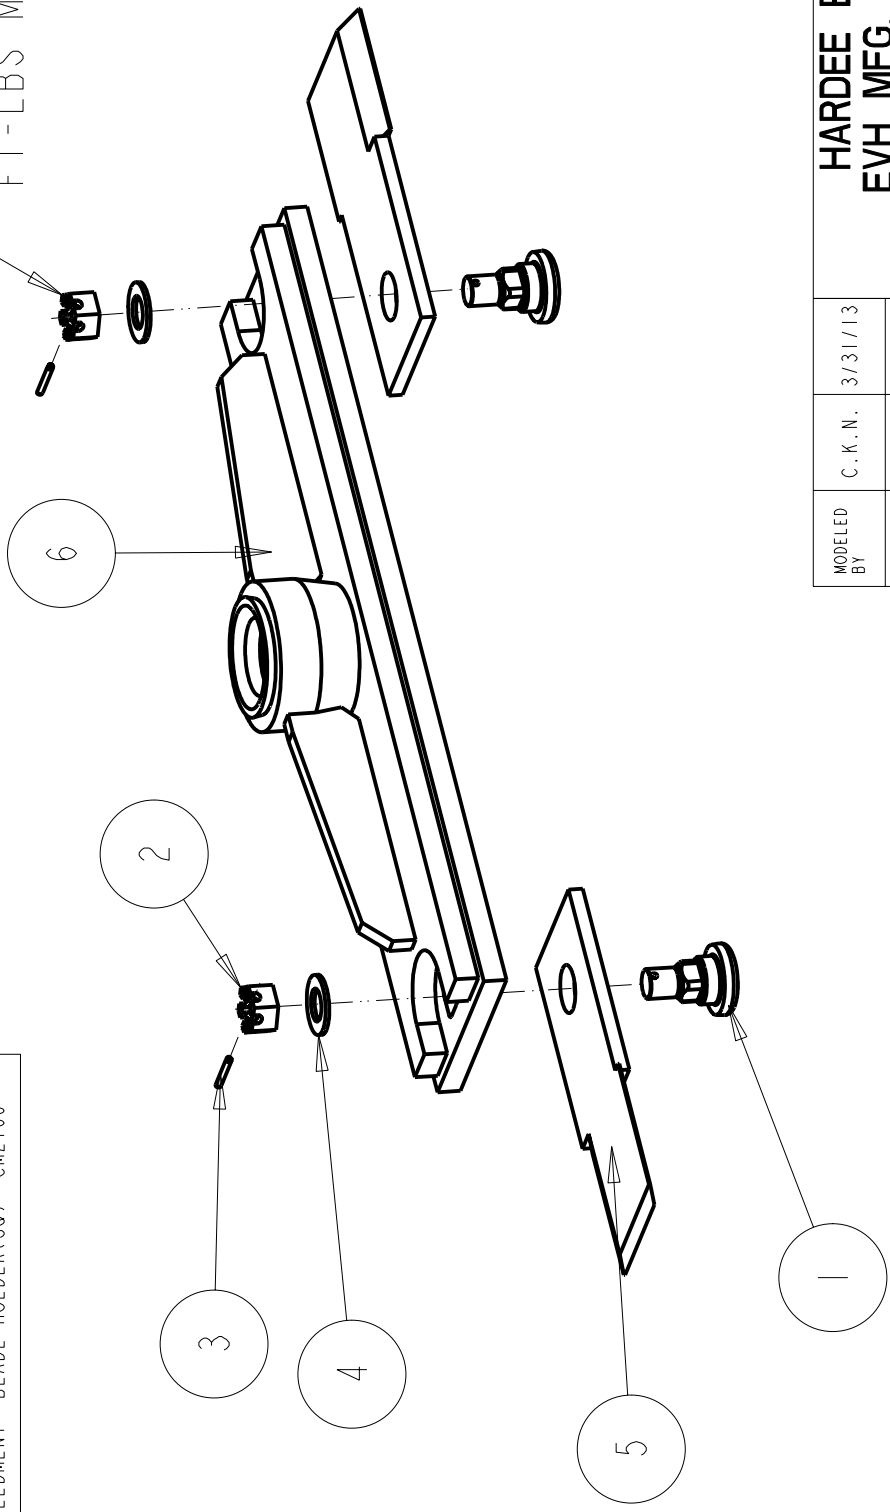


Item	Part Number	Qty.	Description
1	16671	2	Blade Bolt(sq) for 5/8" Thick Blades
2	16672	2	HEX NUT, Slotted, 1-1/4"-12
3	16673	2	1/4"-Coiled Spring Pin-HD
4	16674	2	1 1/4", Flat Washer, Thur-Hardend High Strength, SAE, Yellow Zinc
5	16675	2	BLADE, 5/8"X 6"X15" FLAT BLADE
6	26766	1	WELDMENT- BLADE HOLDER(SQ)- CM2160

All Dimensions in Inches Unless Otherwise Specified
 Dimensions in [] are in Millimeters
 Tolerance Unless Otherwise Specified
 Fractional Dimensions $\pm 1/16"$ Angular Dimensions $\pm 1^\circ$
 Decimal Dim. to Limits Shown All Holes to be $+0 -1/32"$

MODELED BY	C.K.N.	3/31/13	R.M.N.	DESCRIPTION	SHEET 1 of 1
DRAWN BY	C.K.N.	3/31/14			
MATERIAL	Manufactured By:			DO NOT SCALE	DWG. NO.
			EVH Mfg. Co., LLC	A	26765

HARDEE BY
EVH MFG. CO.
 LORIS S.C.


Hydraulic Motor Housing Assembly (Part # 16160)

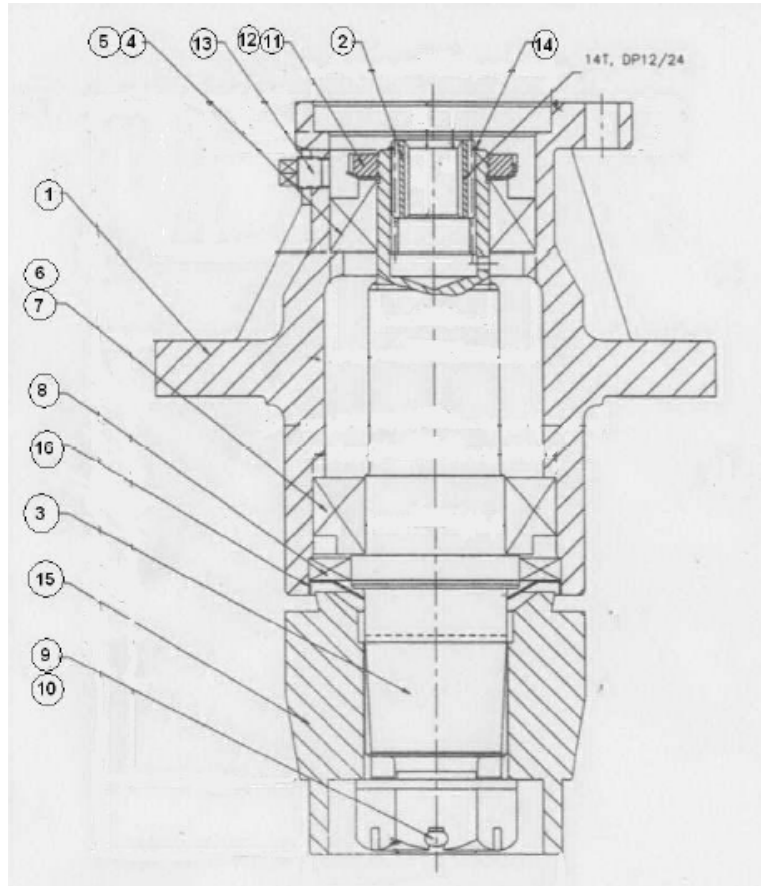

Item No.	Part No.	Quantity	Description
1	16203	1	Housing, MDH-100
2	16159	1	Spline Adapter
3	16204	1	Shaft
4	16207	1	Cup Bearing, 33212
5		1	Cone Bearing, 33212
6	16205	1	Cup Bearing, 33215
7		1	Cone Bearing, 33215
8	16197	1	Output Triple Lip Seal
9	15968	1	Cotter Pin 6.3mm x 60mm
10	16209	1	Hex Slotted Nut, 1-3/4" – 12UN
11	15966	1	Locknut, Bearing M60 x 2
12	15965	1	Lockwasher, M60
13	15784	2	3/8"-18NPT Pipe Plug
14	15970	1	Retaining Ring, External 45 mm
15	16190	1	Blade Hub
16	16210	1	Seal Protector

25792 Driveshaft


(1 3/4 - 20 spline Tractor end & 1 3/8 - 6 spline Imp. end)

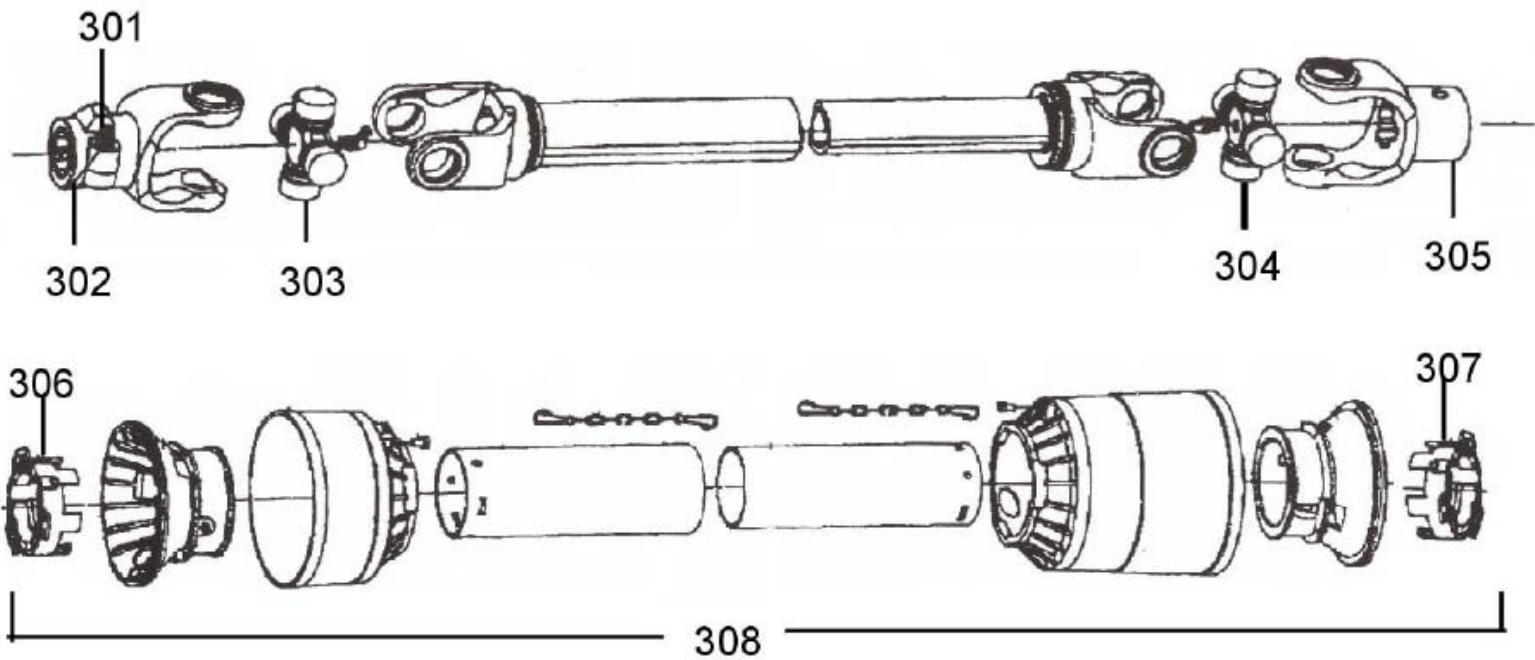

Key #	Part No.	Description	Key #	Part No.	Description
301	16857	Push Pin complete	305	15658	Yoke, Imp end
302	11855	Yoke, Tractor end	306	15804	Shield bearing
303	15629	Cross Kit	307	15805	Shield Bearing
304	15629	Cross Kit	308	11448	Shield kit complete

25793 Driveshaft

(1 3/8 - 21 spline Tractor end & 1 3/8 - 6 spline Imp. end)

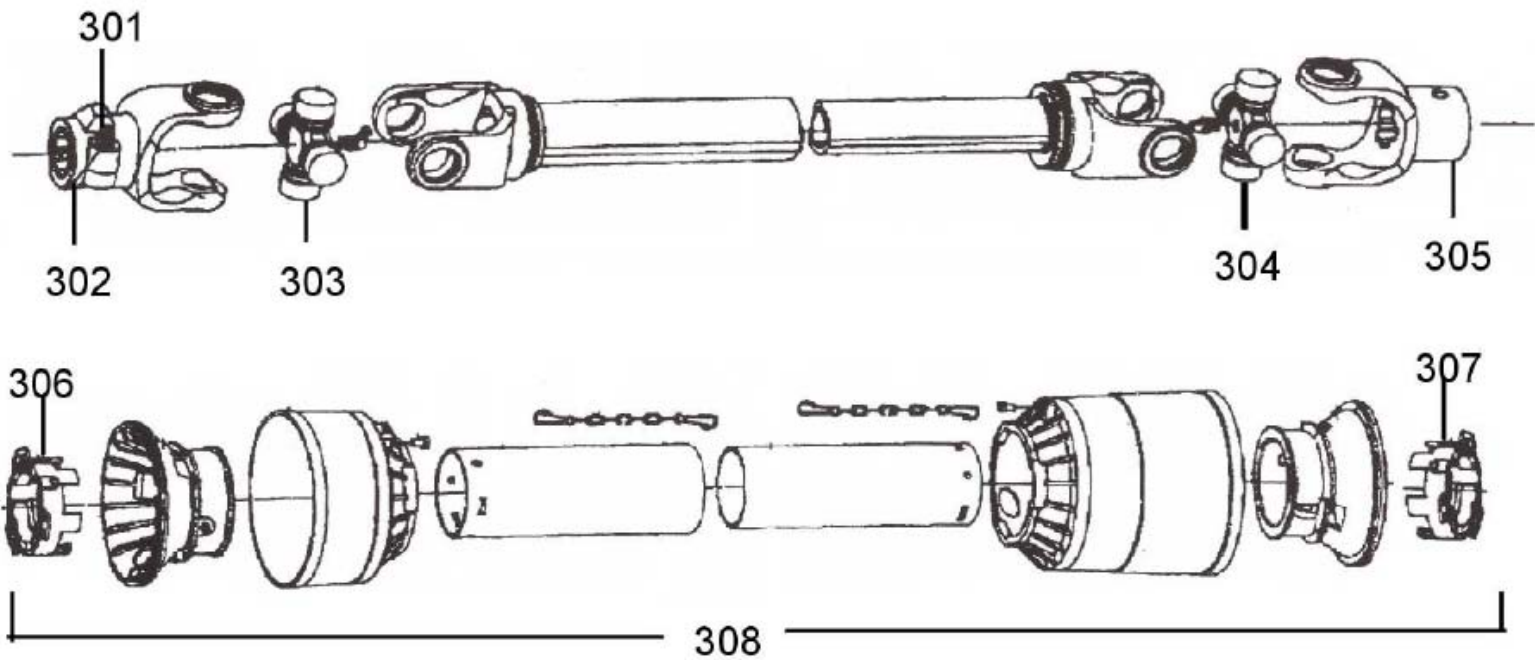

Key #	Part No.	Description	Key #	Part No.	Description
301	15579	Push Pin complete	305	16521	Yoke, Imp end
302	15900	Yoke, Tractor end	306	15804	Shield bearing
303	11437	Cross Kit	307	15805	Shield Bearing
304	11437	Cross Kit	308	11448	Shield kit complete



SECTION 8 BELTING

PARTS LISTING FOR CM2160 AND HR2360 FRONT BELTING-SHORT

Item	Part Number	Qty.	Description
1	10032	2	Hex Bolt 3/8 x 1-1/2 gr.5 plated
2	25710	1	Belting Extension Flat
3	25664	1	Belting for HR2360 Extension
4	10175	2	3/8" Locknut (Gr.5 Plated)
5	10202	4	3/8" Flatwasher (Plated)


PARTS LISTING FOR CM2160 AND HR2360 FRONT BELTING EXTENSION KIT (PART # 25660)

Item	Part Number	Qty.	Description
1	10032	7	Hex Bolt 3/8 x 1-1/2 gr.5 plated
2	22776	1	Belting Extension Flat
3	25661	1	Belting for HR2360 Extension
4	10175	7	3/8" Locknut (Gr.5 Plated)
5	10202	14	3/8" Flatwasher (Plated)
6	22731	1	Short Rubber Belting Flat

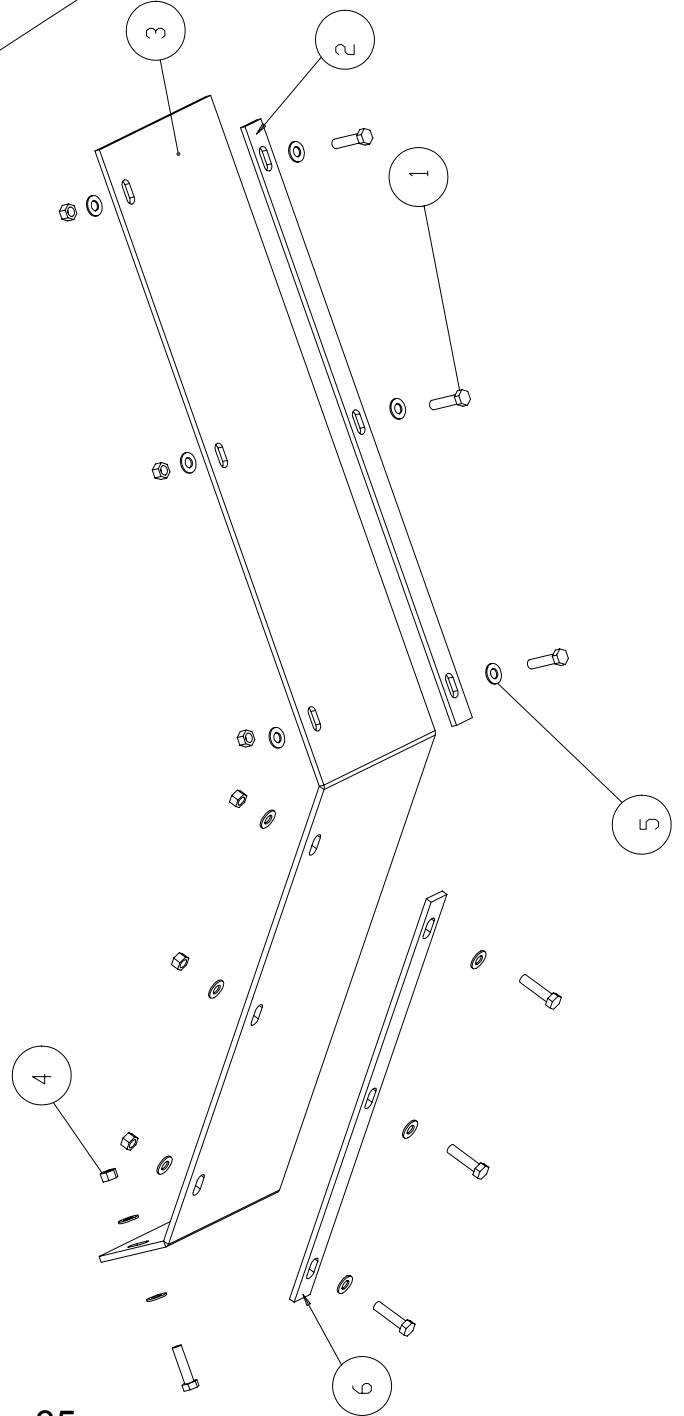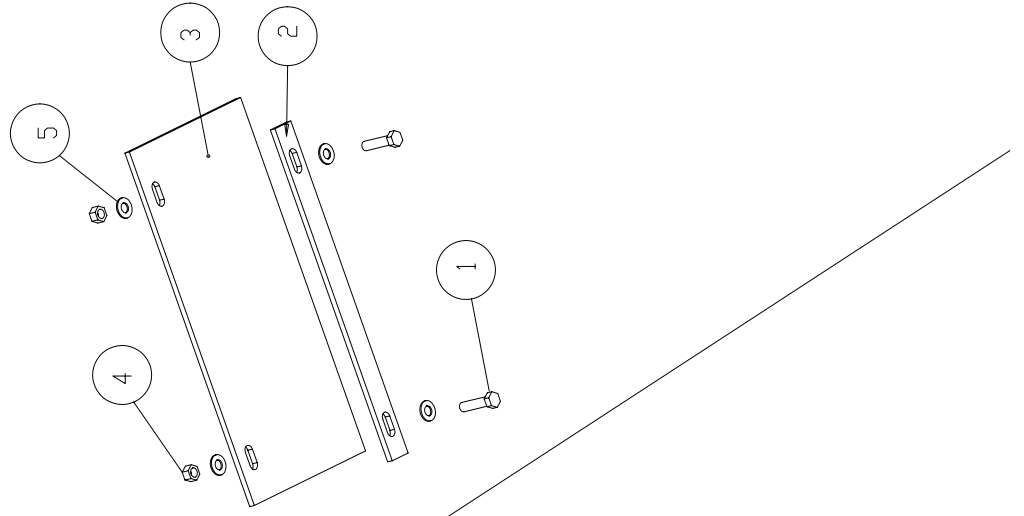



SECTION 8 - BELTING

PARTS LISTING FOR CM2160 AND HR2360 REAR BELTING KIT (PART # 25662)		
Item	Part Number	Description
1	10032	Hex Bolt 3/8 x 1-1/2 gr.5 plated
2	10175	3/8" Locknut (Gr.5 Plated)
3	10202	3/8" Flatwasher (Plated)
4	25663	HR2360 Rubber Belting
5	22730	Long Rubber Belting Flat
6	22731	Short Rubber Belting Flat

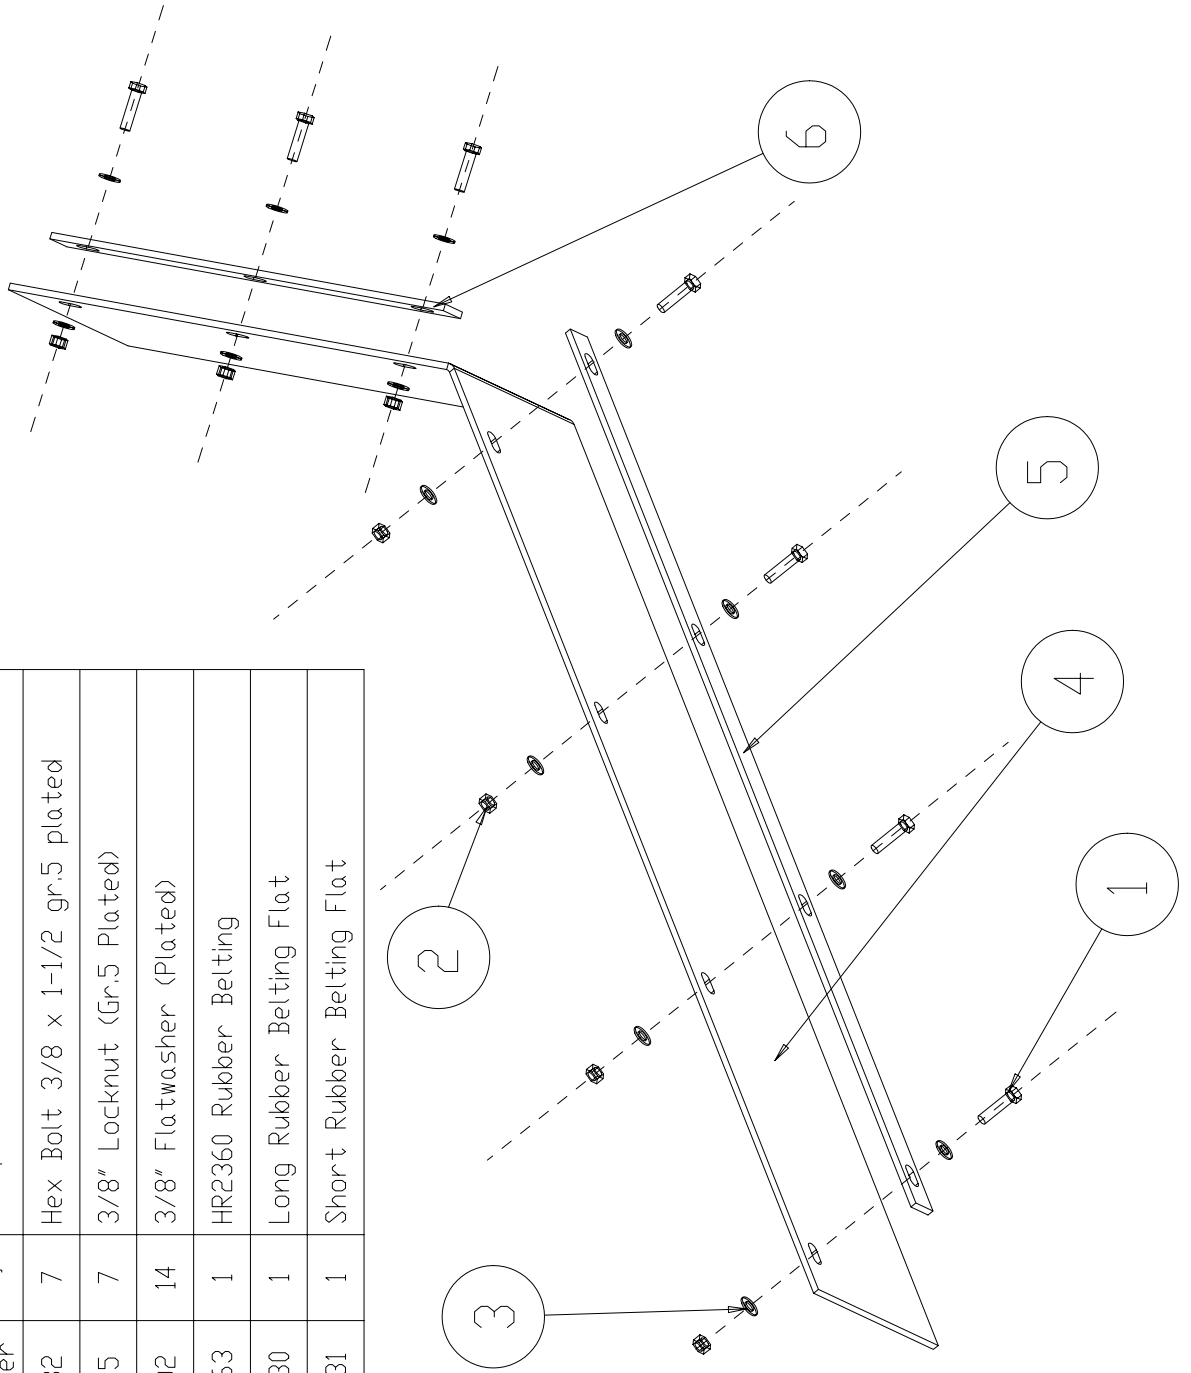

SECTION 8 - CHAIN GUARD


PARTS LISTING FOR CM2160 AND HR2360 FRONT CHAIN GUARD KIT (PART # 20989)		
Item	Qty.	Description
1	2	Hex Bolt 3/8 x 1-1/4 gr.5 plated
2	7	Hex Bolt 3/8 x 1 gr.5 plated
3	9	3/8" Locknut (Gr.5 Plated)
4	18	3/8" Flatwasher (Plated)
5	63	7 Link Chain
6	4	Cable Clamp
7	1	LR40160 Straight Chain Guard Weldment
8	1	HR2360 Corner Chain Guard Weldment
9	1	LR40160 Chain Guard Cable
10	1	Chain Guard Weldment
11	1	Chain Guard Cable

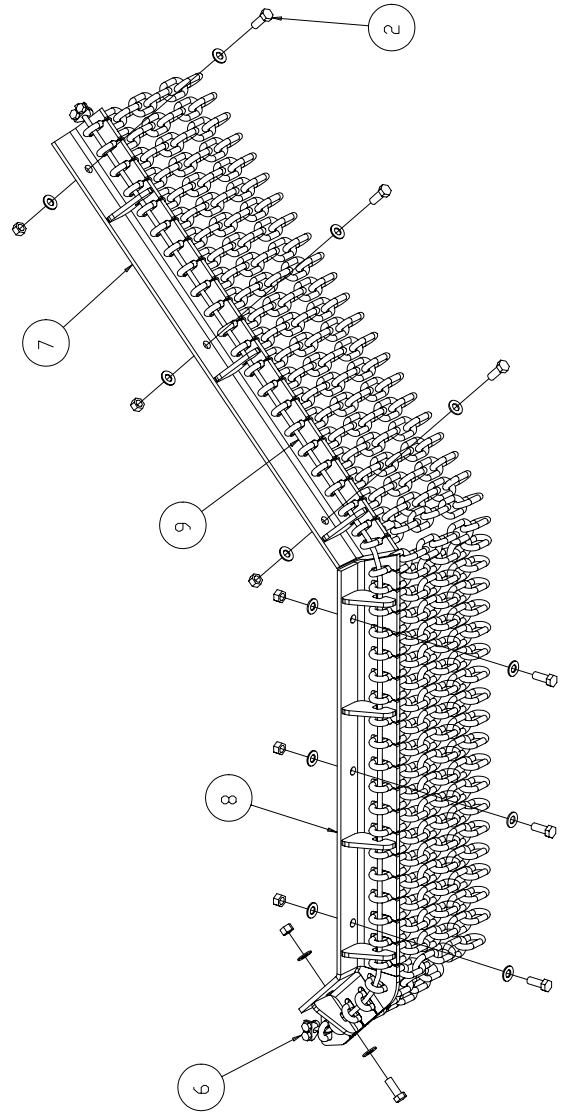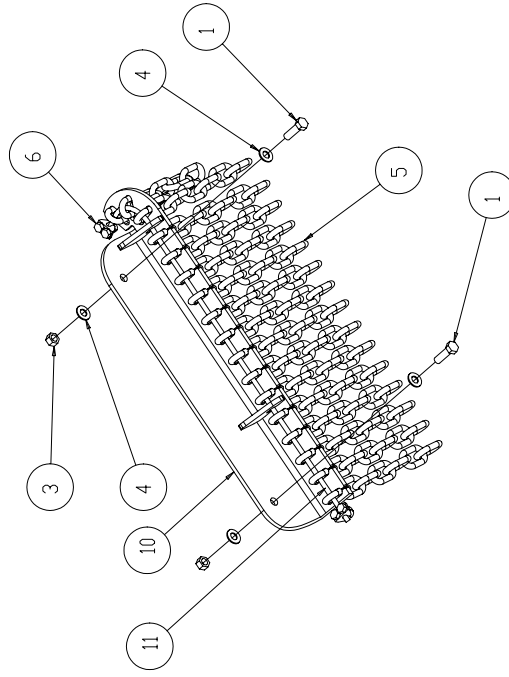

SECTION 8 - CHAIN GUARD

PARTS LISTING FOR CM2160 AND HR2360 REAR CHAIN GUARD KIT (PART # 20990)

Item	Part Number	Qty.	Description
1	10031	7	Hex Bolt 3/8 x 1 gr.5 plated
2	10175	7	3/8" Locknut (Gr.5 Plated)
3	10202	14	3/8" Flatwasher (Plated)
4	10318	57	7 Link Chain
5	10332	2	Cable Clamp
6	20971	1	DB4060 Straight Chain Guard Weldment
7	20973	1	DB4060 Corner Chain Guard Weldment
8	20975	1	DB4060 Chain Guard Cable

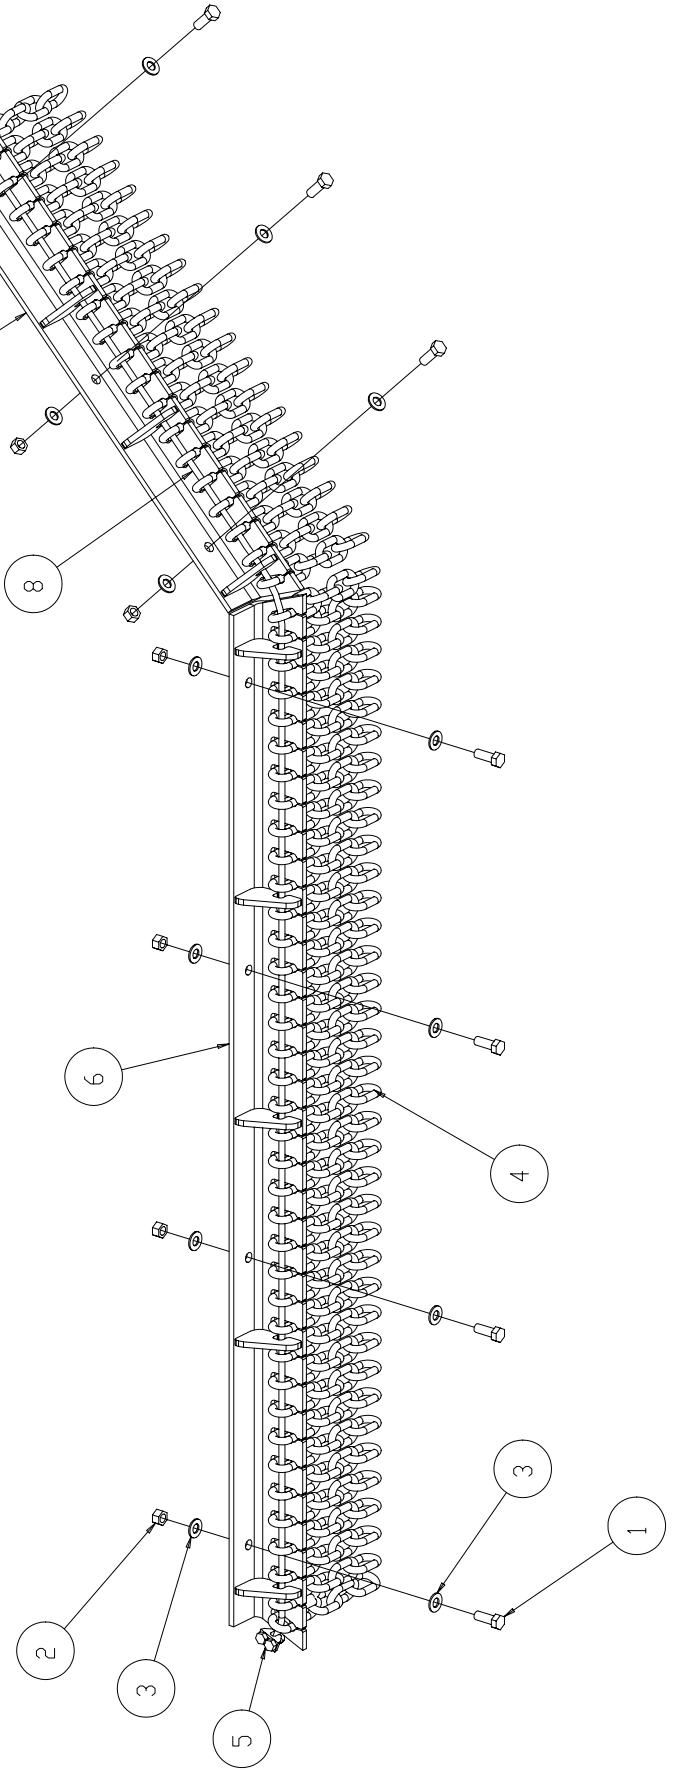

Bolt Torque

Checking Bolt Torque


The table shown below gives correct torque values for various bolts and capscrews. Tighten all bolts to the torque specified in the chart unless otherwise noted. Check tightness of bolts periodically, using bolt torque chart as a guide. Replace hardware with the same strength bolt. Torque figures indicated are valid for non-greased or non-oiled threads and heads unless otherwise specified.

Therefore, do not grease or oil bolts or capscrews unless otherwise specified in this manual. When using locking elements, increase torque values by 5%.

Torque value for bolts and capscrews are identified by their head markings.

Torque Specifications

Diameter "A"	Bolt Torque					
	SAE-2		SAE-5		SAE-8	
	LB-FT	N.m	LB-FT	N.m	LB-FT	N.m
1/4"	6	8	9	12	12	17
5/16"	10	13	19	25	27	36
3/8"	20	27	33	45	45	63
7/16"	30	41	53	72	75	100
1/2"	45	61	80	110	115	155
9/16"	70	95	115	155	165	220
5/8"	95	128	160	215	220	305
3/4"	165	225	290	390	400	540
7/8"	170	230	420	570	650	880
1"	225	345	630	850	970	1320

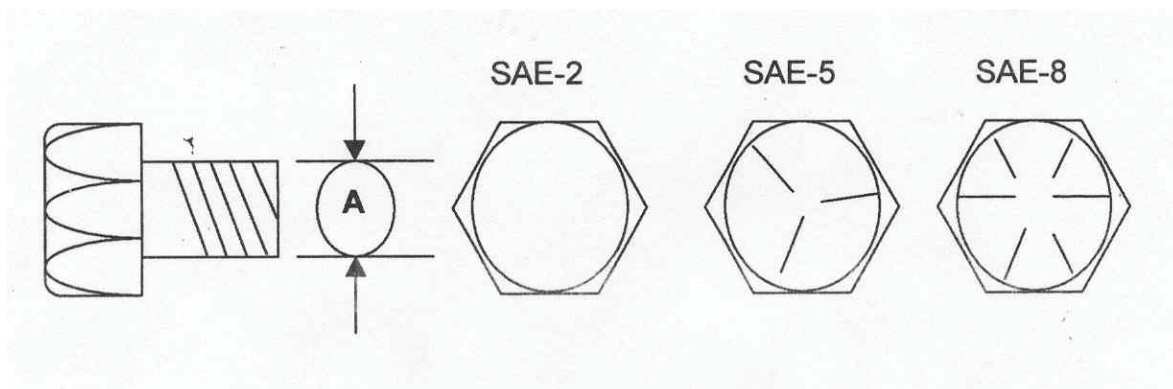

Hardee by EVH Manufacturing Co., LLC Hydraulic Mower Limited Warranty

Hardee by EVH Manufacturing Co., LLC warrants its **Hydraulic Mowers** for one year or **350 hours** (whichever comes first) to the **original** non-commercial, non-governmental, or non-municipal purchaser. For the **original** commercial, industrial, or municipal purchaser, the goods are warranted for 90 days or **350 hours** (whichever comes first) to be free from defects in material or workmanship.

This limited warranty does not apply to any part of the goods which have been subjected to improper or abnormal use, negligence, alteration, modification, accident, or damage due to lack of maintenance, wrong oil or lubricants, or which has served its normal life.

Hardee by EVH Manufacturing Co., LLC **Hydraulic Mowers** include the following units: Miti Mike-35, Tiger SS, DB4048, DB4060, EV1442, MR1442, LR40142, LR40148, LR50148, LR50160, HR2360, and CM2160 Mowers.

The Warranty Card **must** be filled out and returned within **30 days** of purchase. **No** warranty will be allowed without a properly completed and returned warranty card.

“Our obligation under this warranty shall be limited to repair or replacement of any part or parts of this implement, which, in our judgement, shows evidence of such defect, and provided further, that said parts shall be removed and returned by the owner at the owner’s expense to Hardee by EVH Manufacturing Co., LLC, Loris, SC, through an authorized dealer, transportation prepaid, free and clear of liens or encumbrances.”

This warranty shall not include normal wear items.

Changes or alterations to the implement made without the **written** authorization of the manufacturer will render this warranty void. **Tampering with or removing the factory installed hour meter will void this warranty.**

This warranty does not obligate this company to bear any labor costs in replacement of defective parts.

Hardee by EVH Manufacturing Co., LLC reserves the right to make changes or improvements in its equipment at any time, with the express understanding that such changes or improvements do not impose any obligation of the company to install such changes or improvements on implements previously manufactured.

Hardee by EVH Manufacturing Co., LLC Hydraulic Mowers are designed as **Agricultural** machines. They are designed to be used intermittently in **farm** use, **not** constantly as in “Commercial” use. Our machines are designed with brains instead of brawn, to fit the maximum number of tractors. They are not designed nor priced as Commercial machines that operate 8 hours a day / 5 days a week.

The CM2160 is the exception to the above statement, having been designed as a Commercial machine.

IMPLIED WARRANTIES: You may have some implied warranties. For example, you may have an implied warranty of merchantability (that the hydraulic mower is reasonably fit for the general purpose for which it was sold) or an implied warranty of fitness for a particular purpose (that the hydraulic mower is suitable for your special purposes). Special purposes must be specifically disclosed to Hardee by EVH Manufacturing Co., LLC, and not merely to the dealer before your purchase. Hardee by EVH Manufacturing Co., LLC itself must approve, in writing, that the special purpose is warrantable.

These implied warranties do not apply at all if you use your hydraulic mower for business or commercial use.

NOTES:

NOTES:



EVH MANUFACTURING COMPANY, LLC
4895 RED BLUFF ROAD LORIS, SC 29569
PHONE: 843-756-2555
www.hardeebyevh.com evhmfg@hardeebyevh.com